

Power Pong *Omega*

Application User Manual



For Use with the
Power Pong *Omega*
Table Tennis Robot

John Schmidt

Revision 1.01

Caution:

- Please read this User Manual carefully before operating the Omega robot.
- Only utilize 110/220 VAC power based on the ordered product and configuration.
- The Ball Throwing Wheels rotate at high speed. Avoid touching during operation.

IMPORTANT: This User Manual has been developed exclusively for the Power Pong Omega table tennis robot. Copying this manual or any portion of it, without explicit permission in writing from Power Pong, is strictly prohibited.

Table of Contents

Section 1: Introduction to the Omega Application	
1.1 Omega Application Features	1
1.2 Terminology Used in this Manual	2
1.3 Power Pong Service / Support	2
Section 2: Getting Started with the Omega Application	
2.1 Downloading and Installing the Omega Application	3
2.1.1 Android Device	3
2.1.2 iOS Device	4
2.1.3 Connecting the Omega Application to the Robot	6
2.2 Omega Application Main Screens	8
2.2.1 Drills Main Screen	8
2.2.2 Connection Screen	8
2.2.3 Settings Screen	9
2.2.4 Partners Screen	9
Section 3: Using the Omega Application with the Omega Robot	
3.1 Tips for Best Operation and Longevity of the Omega Robot	10
3.2 Initial Robot and Application Setup	10
3.2.1 Checking Ball Placement (Depth)	11
3.2.2 Checking and Adjusting Right/Left Ball Placement	12
3.2.3 Check/Verify Serve Placement	14
3.3 Omega Application Settings Screen.....	15
3.3.1 Slider Adjustments	15
3.3.2 Omega Robot Calibration	17
3.3.3 Replay Tutorial	19
3.3.4 Restore Presets	19
3.3.5 Factory Reset	19
3.4 Working with Omega Application Drills	19
3.4.1 Preloaded Drills	20
3.4.2 Viewing Available Drills	21
3.4.3 Searching for Drills	22
3.4.4 Adding Tags to Drills	22
3.4.5 Starting / Stopping Drills	24
3.4.6 Creating a New Drill	24
3.4.7 Cloning an Existing Drill	25
3.4.8 Changing the Name of a Drill	26
3.4.9 Adding Balls to a Drill	27
3.4.10 Deleting a Drill	29
3.4.11 Drill Duration and Break	29
3.4.12 Random Modes	30
3.4.13 Drill Balls Per Minute (BPM)	31
3.4.14 Changing Ball Order in a Drill	32
3.4.15 Sharing Drills with Power Pong Omega Users	33

3.5	Editing Ball Attributes in Drills	34
3.5.1	Ball Placement	35
3.5.2	Ball Trajectory.....	35
3.5.3	Speed	36
3.5.4	Spin	36
3.5.5	Sidespin	36
3.5.6	Delay	36
3.5.7	Designating Balls as a Serve	37
3.5.8	Sample Button	38
3.5.9	Sampling a Ball	38
3.5.10	Removing a Ball from a Drill	38
3.6	Omega Application Groups	39
3.6.1	Creating a New Group	40
3.6.2	Adding/Removing Drills from Groups	40
3.6.3	Renaming Groups	41
3.6.4	Removing Groups	41
3.6.5	Playing Groups	41
3.6.6	Searching for Groups	41
3.6.7	Using Random Features with Groups	42
3.6.8	Editing Drills from Within a Group	42
3.6.9	Removing Drills from Within a Group	43
3.6.10	Using Duration and Breaks In Groups	43
3.6.11	Cloning Groups	43
3.6.12	Sharing Groups with other Power Pong Omega Users	43
3.7	Using the Remote-Control FOB	43

Section 4: [Maintenance and Troubleshooting](#)

4.1	Pairing a New Remote FOB	45
4.2	General Troubleshooting	46

Section 1 - Introduction to the Omega Application

[TOC](#)

The Power Pong Omega robot can be ordered in two different configurations. The first comes with a hardware controller, which is connected to the robot using a cable (Photo 1-1). The second configuration utilizes a Bluetooth enabled controller installed in the robot base and is used with an iOS/Android based software application running on a phone or tablet. Robots initially ordered with the hardware controller can be upgraded to the Bluetooth enabled controller. Contact Power Pong for additional information.



Photo 1-1 Hardware Controller

Note: This User Manual will focus specifically on the use of the iOS/Android application for the Omega robot. For information related to the hardware controller and/or the Omega robot itself, please see the full **Power Pong Omega User Manual**.

1.1 Omega Application Features

Below are some of the features of the Omega application:

- Ability to easily share drills with other Omega application users
- Ball delivery options include a variety of spin types, trajectory, and placement – all adjustable through the Power Pong Robot Application
- Comes with 45 pre-configured Drills with different spin, speed, trajectory, and placement
- Additional 55 memory locations for your own customized Drills
- Random, Scatter, Shuffle Placement, Sequencing of Ball types in Drills and Groups
- Group feature allowing for up to 32 Drills to be grouped and played together
- Serve functionality - Identifying a ball as a Serve provides an added delay before the ball is thrown.
- Duration and Break – Control how long a Drill will repeat and how much time between repetitions
- Ball Rate – Control the rate at which balls are delivered

1.2 Terminology Used in this Manual

Following is a list of terms that are used throughout this User Manual along with brief definitions.

Ball Attributes – also known as Ball Parameters, the individual settings applied to a ball such as spin, speed, etc.

Ball Edit Mode – clicking on a Ball Selector, while editing a Drill will place you in Ball Edit Mode – where you can change the Attributes of a Ball

Ball Selector – In a Drill, each Ball that is part of the Drill can be selected by touching the rectangular box, with the ball number in it. This is the Ball Selector.

Ball Throw – the action of the Omega robot throwing a ball to a location on the table

Drill - a configurable sequence of up to 8 balls of varying attributes, that upon starting, repeats until stopped

Drill Edit Screen – Choosing / Selecting a Drill from the list of available Drills take you to the Drill Edit screen for that Drill.

Elevation Rings — Rings painted onto the Ball Feed Tube, which are used to adjust the ball throwing height.

Group – sequence of Drills that can be played together

Placement - the location on the table where a ball lands

Preset Drill – a Drill that comes already configured in the Omega application

Throwing Head Assembly – the portion of the robot that contains the 3 motors/wheels for throwing the balls

1.3 Power Pong Service / Support

For assistance with the Omega Application, please email Power Pong support at support@powerpong.org

Please provide the following information:

1. Your full name.
2. Your phone number
3. The Model of your table tennis robot (i.e., Alpha, Beta, Delta, Omega)
4. A full description of the issue you're having with the robot.

You may also call Power Pong Support at: **714-280-6821**. We look forward to helping you! A Power Pong service representative will respond to you promptly.

Section 2 - Getting Started with the Omega Application

[TOC](#)

This section of this User Manual covers the installation of, and an introduction to the software application. The application is used to control the Power Pong robot, and all aspects of how the balls are thrown/delivered to you. This includes:

- placement of the ball on the table
- speed, spin, and trajectory of the balls
- starting/stopping and the rate of ball delivery
- programming Drills and Groups
- the use of random placement/ball type features

2.1 Downloading and Installing the Omega Application

2.1.1 Android Devices

1. Visit the Android Play Store by starting the Play Store application on your android device. (Figure 2-1)

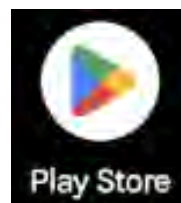


Figure 2-1

2. In the Play Store application, search for the application by typing "Power Pong" in the Search apps box. (Figure 3-2)



Figure 2-2

3. Choose the Power Pong Robot application and press the Install button (Figure 2-3). You will be shown a progress circle indicating that the application is being installed (Figure 2-4).

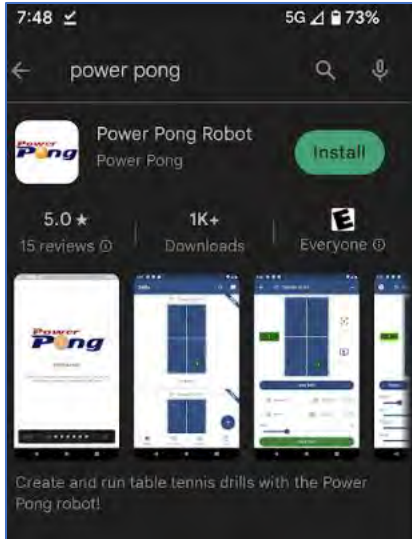


Figure 2-3



Figure 2-4

4. Upon successful completion of the installation process, you will be presented with an Open button. Congratulations. Proceed to Section 2.X to start the Application and to connect to the Omega robot.

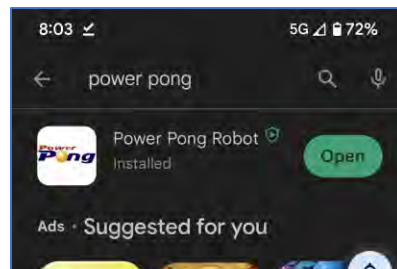


Figure 2-5

2.1.2 iOS Devices

1. Visit the Apple App Store, by pressing the App Store icon on your iOS device (Figure 2-6).
2. Press the Search icon (bottom right of screen) to bring up the Search page in the App Store (Figure 2-7).



Figure 2-6



Figure 2-7

3. Type “Power Pong robot” in the search field at the top of the screen and press the Search button (Figure 2-8).


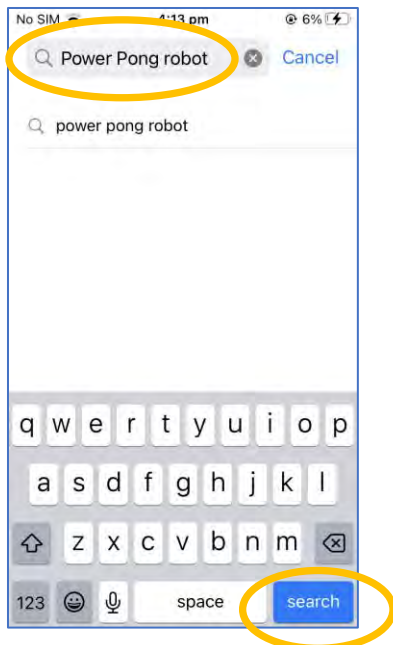


Figure 2-8

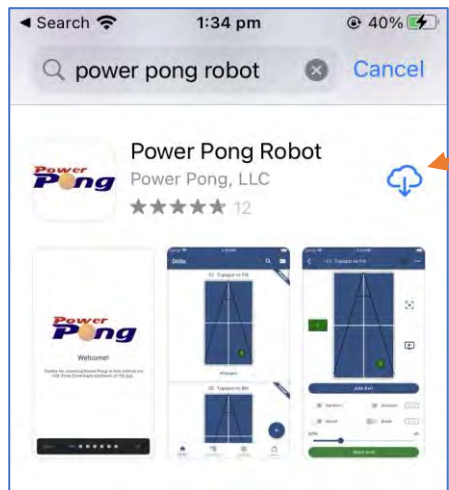

Press to Download and Install

Figure 2-9

4. If necessary, scroll until you see the Power Pong Robot application. Press the download button to Download and install the app onto your iOS device (Figure 2-9).
5. When you see the word OPEN show up (Figure 2-10) you have successfully downloaded / installed the Power Pong Robot application.
6. Press the OPEN button to start the Power Pong Robot application. You can also exit the Apple Store application and find/press the Power Pong Robot icon on your device, to start after the installation is complete.

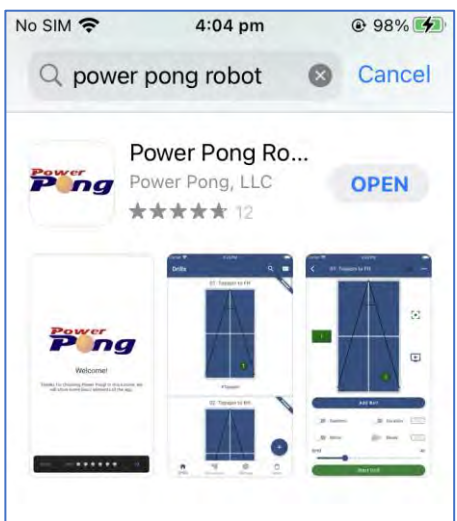


Figure 2-10

2.1.3 Connecting the Omega Application to the Robot

1. Setup the Power Pong Omega robot and plug the robot into an appropriate power source. Complete setup instructions are available in the full Power Pong Omega User Manual.
2. Find the Power Pong Application/icon installed on your Android/iOS device and press it to start.

Note: Communication between your Android/iOS device and the robot will require the use of Bluetooth on your Android/iOS device. If you don't have Bluetooth enabled, you may get a message like the one shown in Figure 2-11. If you see this, go into Settings on your device to enable Bluetooth.

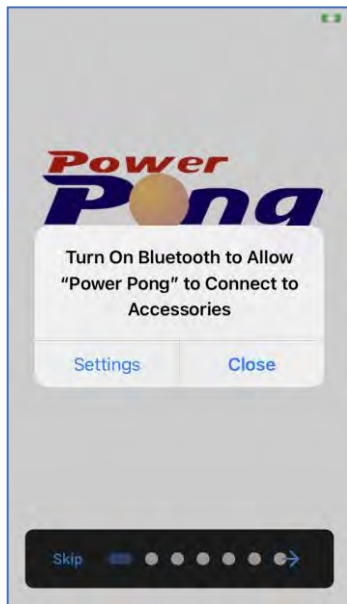


Figure 2-10

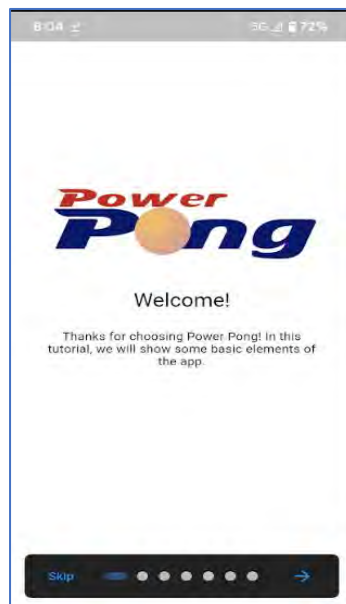


Figure 2-11



Figure 2-12

3. Scroll through 6 introduction screens by pressing the right arrow button on the bottom of the screen.
4. After pressing the Skip button, you will be presented with the Drills screen (Figure 2-12). Before using a Drill, we must connect our Android/iOS device to the robot. Press the Connection button on the bottom of the Android/iOS Power Pong Robot application (Figure 2-13).

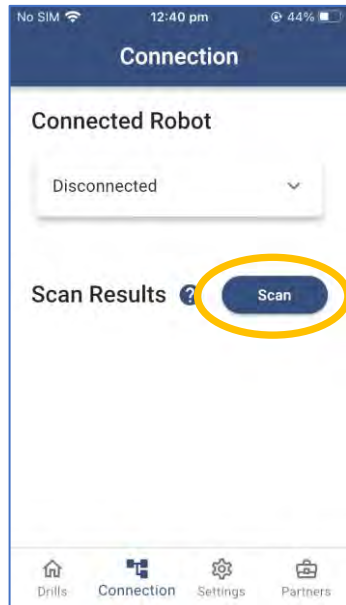


Figure 2-13

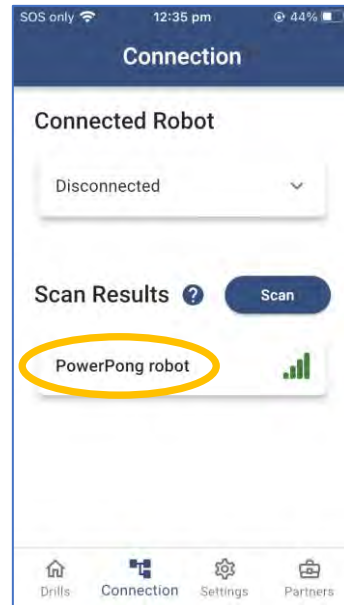


Figure 2-14

5. Press the Scan button, so that the Power Pong Robot Application can “search” for the robot. It should find the robot called Power Pong robot (Figure 2-13).
6. Connect the application to the robot by pressing “Power Pong robot” (Figure 2-14). You will then see a screen confirming Connection as shown in Figure 2-15. Once connected, you can touch the down arrow to the right of the robot name, to see the version of the Power Pong application. (Figure 2-16)

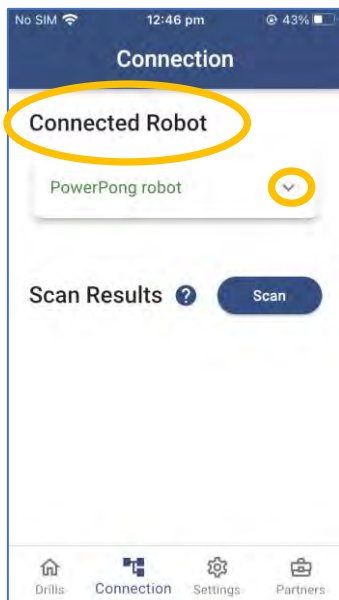


Figure 2-15

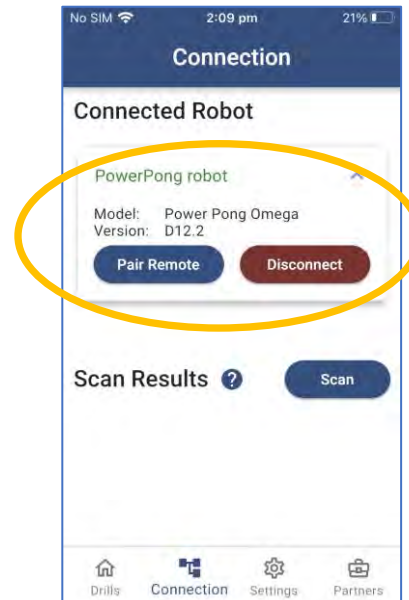


Figure 2-16

2.2 Omega Application Main Screens

The Omega Application has 4 Main Screens which are described below. In-depth usage of these screens is covered in Chapter 3 of this User Manual.

2.2.1 Drills Main Screen (Figure 2-17)

This is where Drills are viewed and selected for play. The system comes pre-loaded with 45 Drills which you have access to. You can also add/delete/modify drills, and share drills with other users. Refer to Chapter 3 for further details.

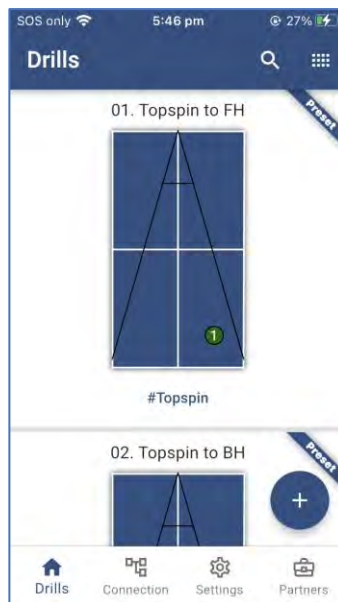


Figure 2-17

2.2.2 Connection Screen (Figure 2-18)

This screen is used to manage the connection between the Omega Application on the Android/iOS device and the Omega Robot.

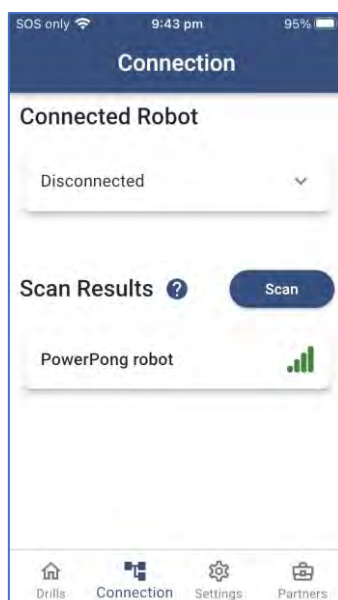


Figure 2-18

2.2.3 Settings Scree (Figure 2-19)

Many settings for operations of the Omega Application/Robot are controlled through this screen, in addition to robot Calibration. These functions are covered in full, in Section 3.

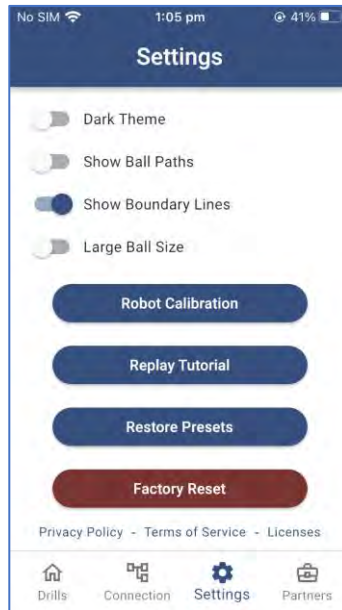


Figure 2-19

2.2.4 Partners Screen (Figure 2-20)

This screen contains links to distributors of Power Pong robots and accessories.



Figure 2-20

Section 3 - Using the Omega Application with the Omega Robot [TOC](#)

3.1 Tips for Best Operation and Longevity of the Omega Robot

For best operation and longevity, follow the guidelines below.

- The Omega robot works best when using the supplied Power Pong table tennis balls. Additional balls may be ordered from powerpong.org when needed.
- New balls should be washed and dried, to remove residual manufacturing dust before being used in the Omega robot.
- Keep all balls, new or old, that you use in the robot clean. When the balls contact the floor in your playing area, they may pick up dirt and various debris. This dirt/debris can be transferred into the robot, onto the robot ball throwing wheels, reducing the performance of the robot. See the full Omega Robot User Manual for instructions on cleaning the Omega robot.
- The Omega robot is designed for use in dry, indoor rooms. Do not use it outdoors or in any wet or damp environment.
- Avoid leaving your robot where it is exposed to heat such as a hot car or trunk.
- Do not allow objects including dented balls, hair, string, etc. to fall into the collection net where they can work their way into the robot. These objects can cause ball jams, interfere with correct operation and/or damage the robot.

3.2 Initial Robot and Application Setup

The Omega robot is set up and calibrated before it leaves the factory. Before using it however, it's useful to verify proper operation.

1. Refer to the full Omega Robot User Manual. Perform the steps covered in Chapter 2 to physically set up the Omega robot.
2. For the Initial Robot Setup, the height of the throwing head assembly must be at the 2nd ring. If necessary, loosen the Throwing Head Assembly adjustment bolt and set the height to the second ring (Photo 3-1 and 3-2). **DO NOT OVERTIGHTEN THE THROWING HEAD.**



Photo 3-1

Throwing Height
Adjustment Knob

Ball Feed Tube
Locking Assembly



Photo 3-2

Second Ring
just Visible

3.2.1 Checking Ball Placement (Depth)

1. Select the Drills Screen by pressing the Drills button on the bottom of the App (Figure 3-1). You will then be able to see the Drills screen as shown in Figure 3-2. (Drills will be covered in greater detail, later in this section of the User Manual.)

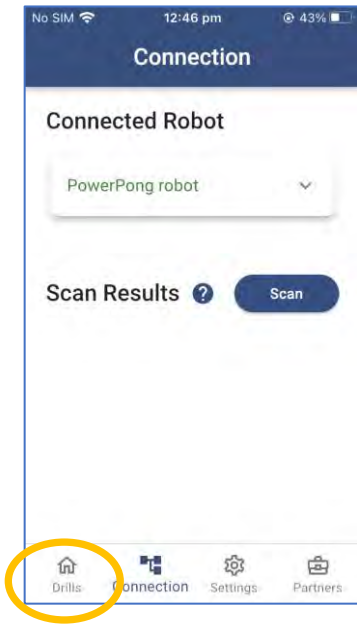


Figure 3-1



Figure 3-2

2. Scroll nearly to the end of the list of Drills and select **Test Drill 1** by pressing **Test Drill 1** (Figure 3-3). You will then be presented with the details of **Test Drill 1** (Figure 3-4).

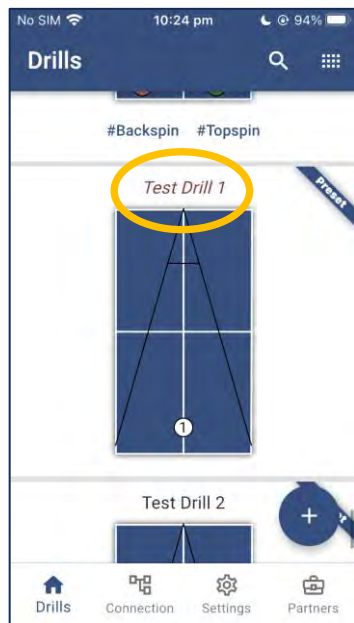


Figure 3-3

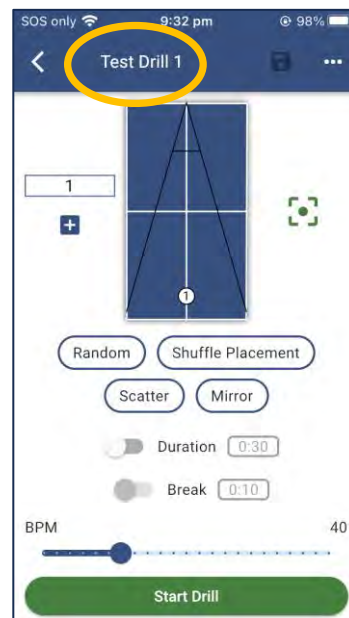


Figure 3-4

3. Move the Balls per Minute (BPM) slider to 20 (Figure 3-5).

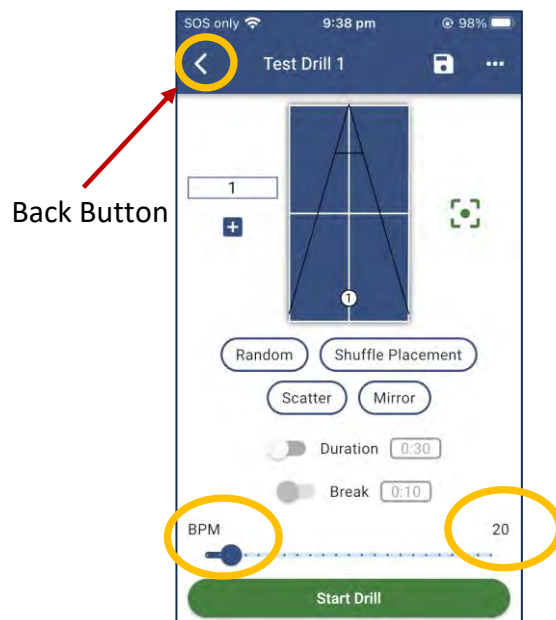


Figure 3-5

4. Press the Start Drill button. This will trigger the robot to deliver balls down the centerline. For this step, we are not concerned about right/left placement, but we are concerned about the distance from where the ball lands to the end of the table. This distance should be **approximately 16"**.

Tip: To help determine if the ball is landing at the correct depth, cut out a 1" square piece of paper and lay it on the table, 16" from the edge. Watch where the balls land. Again, don't be concerned about left/right placement – we're just checking throwing distance.

5. Measure the distance. If the distance is > 18" or < 14", calibration is suggested. Complete Section 3.2.2 and then perform the Calibration procedure found later in Section 3.

3.2.2 Checking and Adjusting Right/Left Ball Placement

1. Return to the list of Drills, by pressing the Back button on the top left of the **Test Drill 1** screen (Figure 3-5).
2. From the list of Drills, select **Test Drill 2** (Figure 3-7). This Drill will deliver balls alternately from the forehand side to the backhand side. We must measure the approximate distance from where the ball lands on both sides of the table, to the corresponding side edge, and verify that those measurements are approximately equal.



Figure 3-6


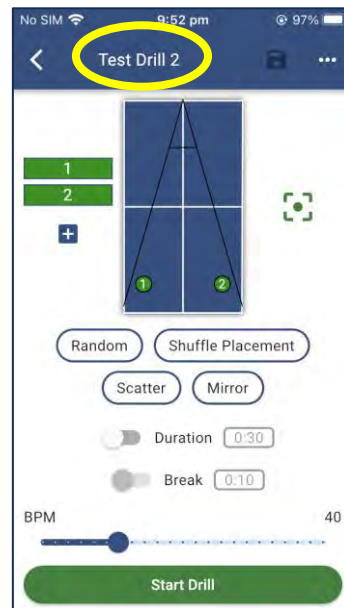


Figure 3-7

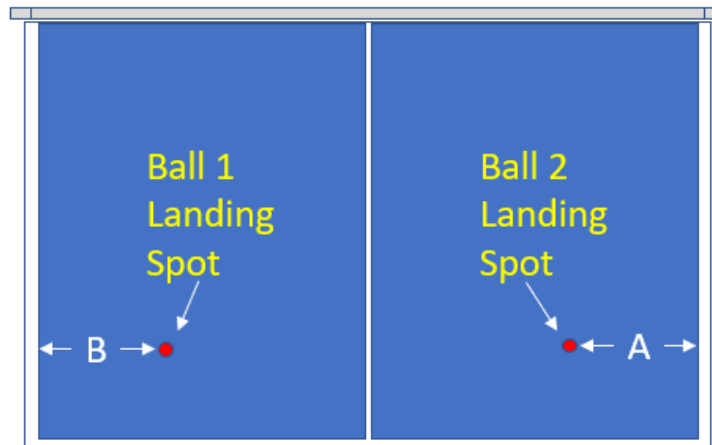

The difference between Measurement A and Measurement B must be 2 inches or less.

Figure 3-8

3. Move the BPM slider to set the balls per minute to 20 as done previously.
4. Press the Start Drill button and observe/measure the distance from the balls thrown on the right side of the table to right edge of the table and the same for the left.
5. If the distances are not similar, adjust the throwing head assembly by carefully loosening the Throwing Head Assembly Adjustment knob and rotating the assembly appropriately until the distance from where the ball lands to the edge of the table is **near** equal – for both sides (Photo 3-3).



Throwing Height Adjustment Knob

Ball Feed Tube Locking Assembly

Photo 3-3

3.2.3 Check/Verify Serve Placement

1. Return to the list of Drills, by pressing the left arrow button on the top left of the **Test Drill 2** screen.
2. From the list of Drills, select **Test Drill 3** (Figure 3-9).

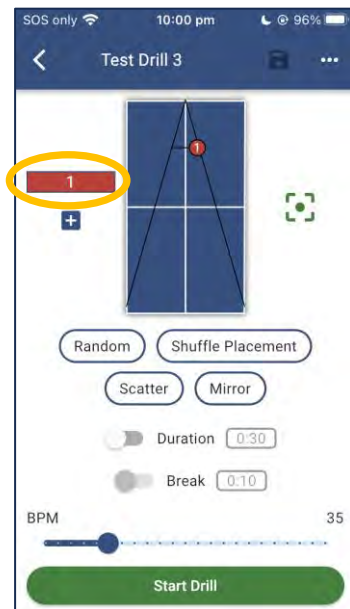


Figure 3-9

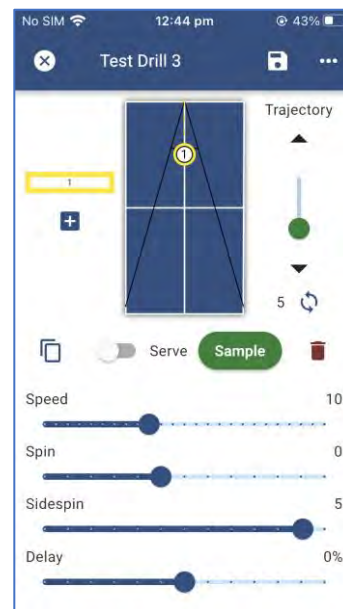


Figure 3-10

3. Press the 1 on the **Test Drill 3** screen to edit/verify the settings for the Ball 1 in the Drill (Figure 3-8).
4. Verify and/or if necessary, change the Ball 1 settings so that the Speed=10, Spin=0, and Sidespin=5 (Figure 3-10).
5. Press Start Drill and verify that the serve balls clear the net and lands midway between the near and back of the table. The ball will have spin on it causing it to curve onto the right side of the table.

This concludes the Initial Setup of the Omega Robot with the Omega Application.

3.3 Omega Application Settings Screen

The Settings screen allows you to make changes to the operation of the Omega robot. These changes include appearance and functionality changes. Additionally, robot Calibration, Preset Restore, and Factory Reset operations are performed from the Settings screen.

3.3.1 Slider Adjustments

The slider settings affect how the screens appear when editing a Drill. See Figures 3-11 through 3-16.

Theme – By default, the application will use a “Light” Theme (Figure 3-11) which means the backgrounds of screens will be light in color, with darker text. By turning on the Dark Theme (Figure 3-12), backgrounds will be dark, and text will be light.

Show Ball Paths – Moving this slider to the right will result in the expected paths being visible with dashed lines when editing a Drill.

Show Boundary Line – Turning this option ON will show the outer boundaries of where the balls can be delivered, when editing a Drill.

Large Ball Size – Turning this option ON will increase the size of the balls shown when editing a Drill.

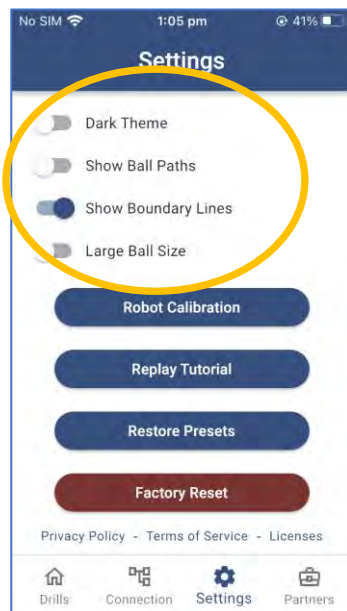


Figure 3-11

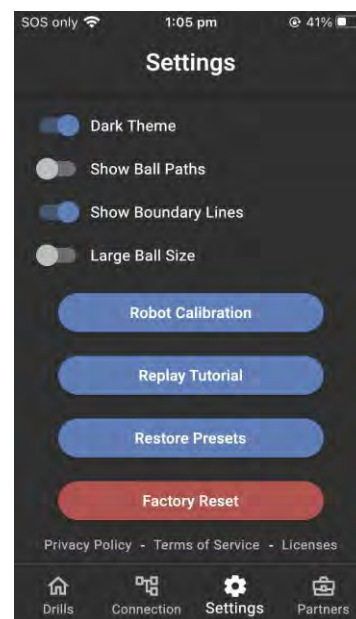


Figure 3-12

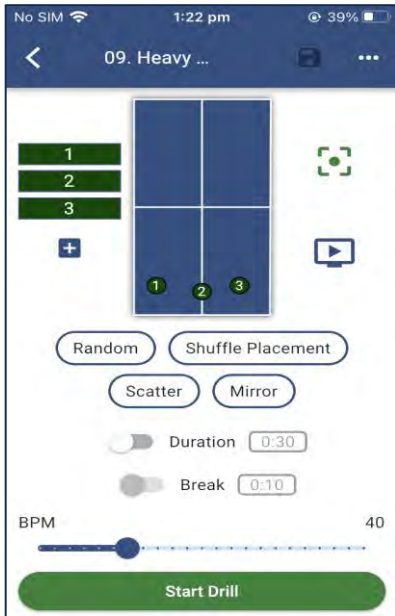


Figure 3-13
No Ball Paths, No
Boundaries

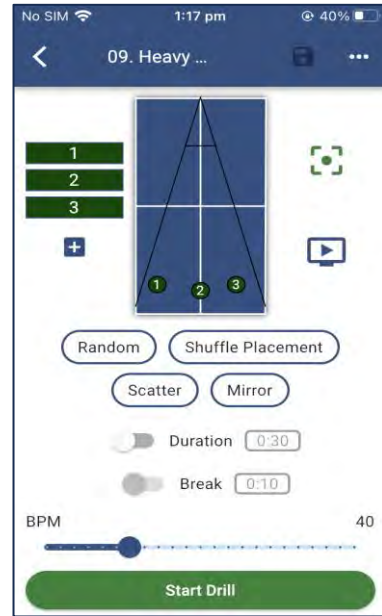


Figure 3-14 Show
Boundaries

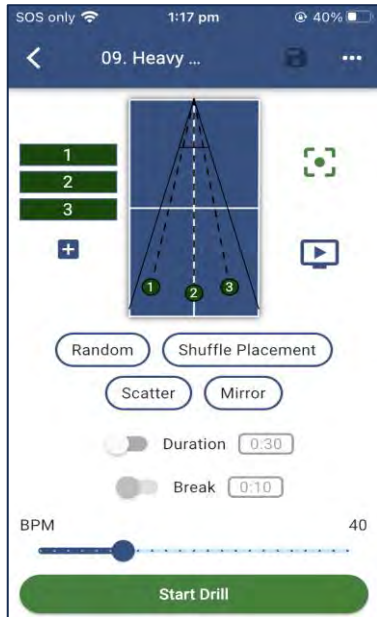


Figure 3-15
Show Ball Paths and
Boundaries

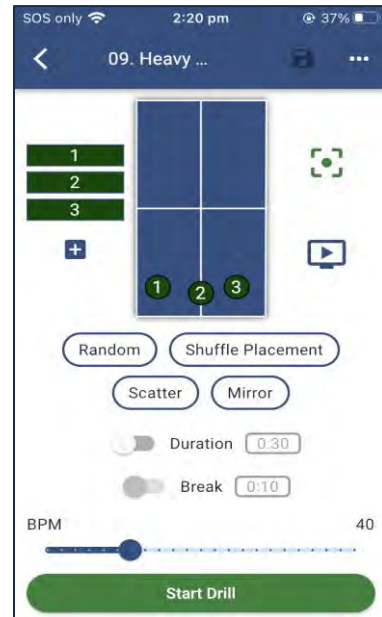


Figure 3-16
Large Ball Size with No
Boundaries and No Ball
Paths

3.3.2 Omega Robot Calibration

The robot is calibrated before it ships from the factory. During shipping or sometimes from continued/normal use, the calibration may need to be redone. If you feel that ball placement is off, first perform a Throwing Head Reset by pushing the button that is on every Drill screen (Figure 3-17). If the reset doesn't help, then calibration may be required. The calibration is performed using **Test Drill 1**. Perform the following steps to Calibrate the Omega Robot.

1. Verify that the Throwing Head Assembly height is at the second ring. (Photo 3-4)

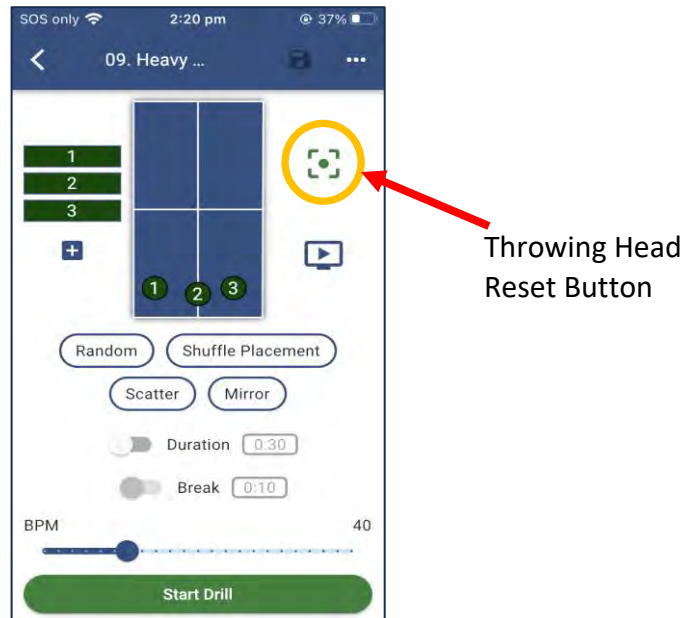


Figure 3-17

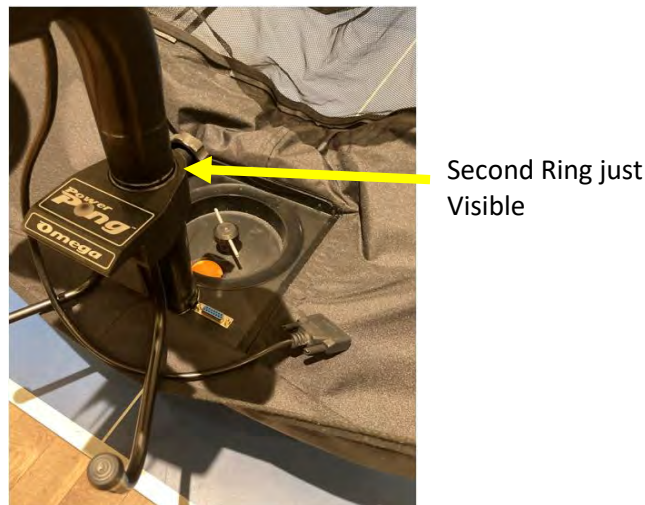


Photo 3-4

2. Select the Drills Screen by pressing the Drills button on the bottom of the Application Main Screen.
3. Scroll nearly to the end of the list of Drills and select Test Drill 1.

4. Move the BPM slider to set the balls per minute to 20 (Figure 3-18).

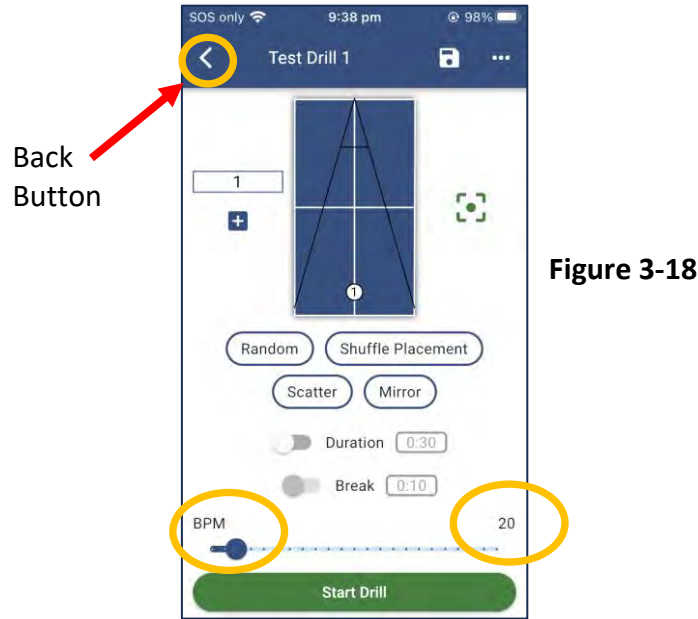


Figure 3-18

5. Press the Start Drill button. This will trigger the robot to deliver balls down the centerline. The balls should land **approximately** 16” from the end of the table.

Tip: To help determine if the ball is landing at the correct depth, cut out a 1” square piece of paper and lay it on the table 16” from the edge. Do not be concerned about left/right placement – we’re just checking throwing distance.

6. Measure the distance. If the distance is > 17” or < 15”, continue with the procedure. If the distance is acceptable, no calibration is required.

7. Press the Back button to return to the Main Screen AND press Settings to open the Setting screen.

8. Press Robot Calibration on the Settings Screen and you will be shown the Robot Calibration Screen (Figure 3-19). Note that the setting on your screen may be different than what’s shown in the Figure.

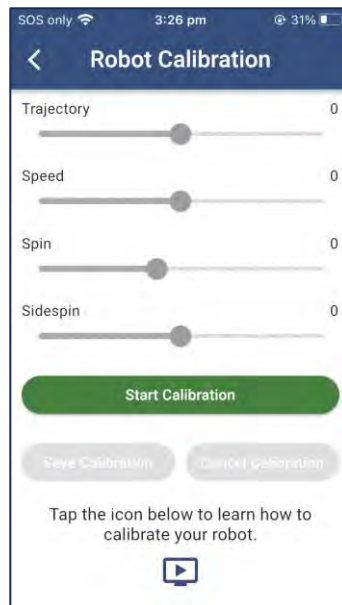


Figure 3-19

9. The depth of the ball will be affected by both the Speed and the Trajectory. Adjust one or both of those controls until the ball is landing approximately 16" from the end of the table.
10. When you are satisfied with the ball depth, press the Save Calibration button.
11. Press the Back button to return to the Settings screen.

This completes the Robot Calibration procedure.

3.3.3 Replay Tutorial (Figure 3-20)

Pressing the Replay Tutorial button will take you back to the original Power Pong Welcome screen that you saw when you first installed the Omega Application, showing you some basic elements of the application.

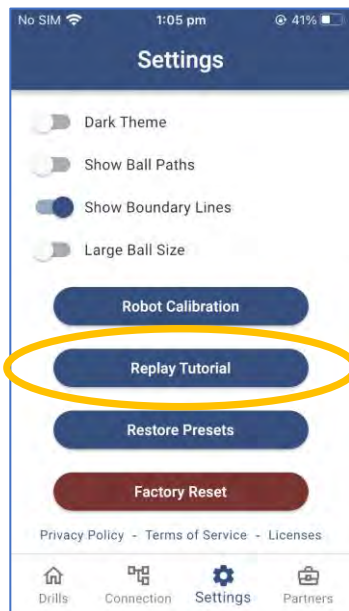


Figure 3-20

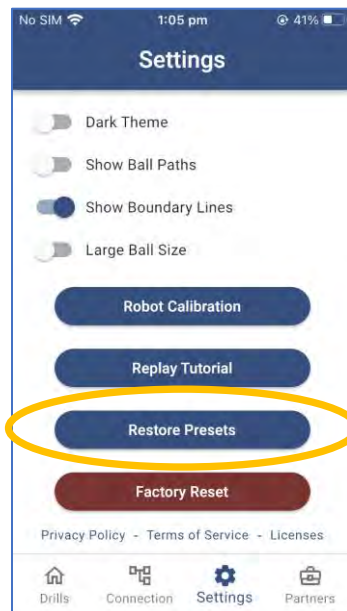


Figure 3-21

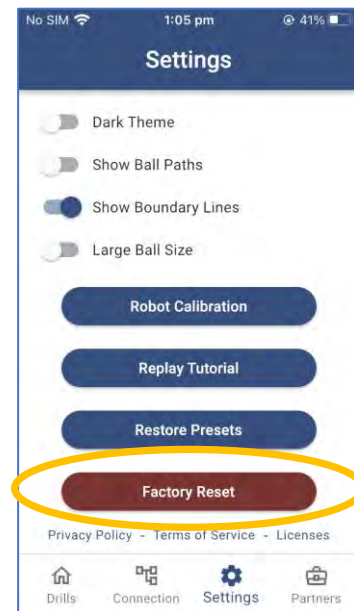


Figure 3-22

3.3.4 Restore Presets (Figure 3-21)

Pressing this button will restore the pre-loaded drills that came from the factory. This will remove any modifications that you may have made to the pre-loaded drills.

3.3.5 Factory Reset (Figure 3-22)

This button will return the application to the original state as if you just loaded it onto your device. Any new drills or changes to pre-loaded drills will be erased, and all of the settings for the application will be returned to their original/default configuration.

3.4 Working with Omega Application Drills

Drills are predefined sequences of one or more balls (up to 8), thrown to different locations as desired, with different spins and speed (as desired), that can be repeated, allowing you to create an endless number of training exercises. Once a Drill is designed and setup, it can be saved in the application for future use. You can design and add your own drills, modify existing drills, store them in the application and even share your drills with other Power Pong Omega users.

3.4.1 Preloaded Drills

The Omega application comes from the factory with 45 preconfigured drills labeled Drill 1 through Drill 45 along with 3 Test Drills used for calibration.

The Drills are designed to be used with the throwing head at the 2nd ring/height however adjustments may be utilized as you see fit. Table 3-1 contains a listing/description of the factory supplied Drills. Note that the terms “forehand” and “backhand” are based on a right-handed player.

NOTE: During Drills, if the balls are either landing short (into the net) or long (over the edge of the table) perform the Checking Ball Placement found earlier in Section 3.

Table 3-1

Drill #	Drill Description
1	Topspin to FH
2	Topspin to BH
3	Topspin to FH/BH
4	Topspin to FH, Topspin to MID
5	2 Topspins to BH, 1 Topspin to FH
6	2 Topspins to BH, 2 Topspins to FH
7	Topspins to BH, Mid, BH, FH
8	Heavy Topspin to BH
9	Heavy Topspin to BH, Mid, FH
10	Topspin Random
11	Backspin to BH
12	Backspin to FH
13	Backspin to BH, Mid, FH
14	Backspin Random
15	Heavy Backspin to Mid
16	Heavy Backspin to Random
17	Backspin to FH, Heavy Backspin to FH
18	No Spin to FH
19	Smash to BH
20	Smash to FH, BH
21	Smash Random
22	Topspin Lob to FH
23	Topspin Lob to FH, BH
24	Backspin Lob to BH
25	Backspin Serve to BH
26	Backspin Lobs Random

27	Right Sidespin Serve to BH
28	Left Sidespin Serve to BH
29	Deep Nospin Serve
30	Nospin Serve to BH, Topspin to FH, Topspin to Mid
31	Nospin Serve to FH, Topspin to BH, Lob to Mid
32	Backspin Serve to FH, Topspin to FH
33	Backspin Serve to BH, Topspin to FH, Mid, BH
34	Right Sidespin Serve to BH, 2 Topspins to FH, 1 Lob to Mid
35	Left Sidespin Serve to FH, 3 Topspins to BH, 1 Topspin to FH
36	Topspin to FH, Smash to FH
37	Topspin to BH, Smash to BH
38	Backspin Serve to FH, Backspin to FH, Topspin to FH, Lob to FH, Smash to FH
39	Backspin Serve to BH, Lob to Mid, Smash to FH
40	Backspin Serve to FH, Lob to Mid, Smash to BH, Lob to FH
41	Backspin / No-Spin Variety
42	Backspin Floater
43	Backspin-Topspin Transition Balls
44	High Backspin / High Topspin
45	Two Ball Combination

3.4.2 Viewing Available Drills

From the Drills screen, you can simply scroll up/down to see the various drills that are available (Figure 3-23). The 45 drills that come pre-loaded on the Omega robot will say Preset in the top/right corner.

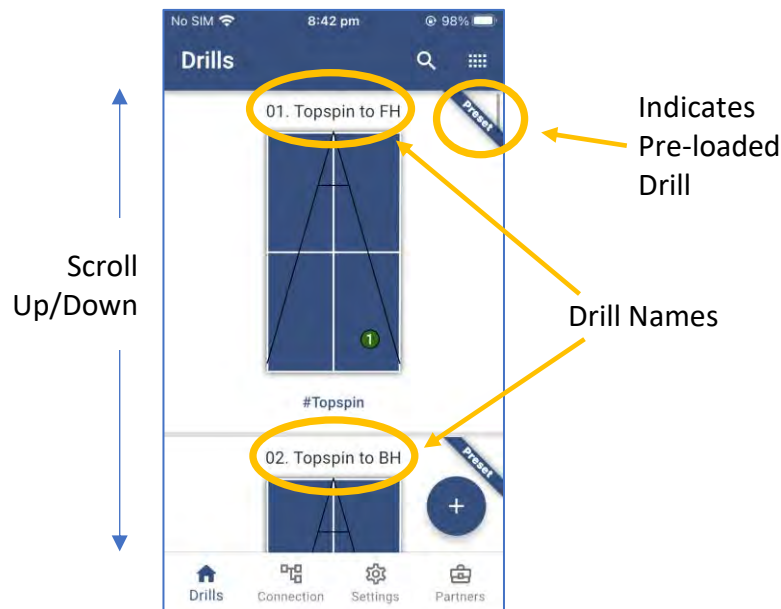


Figure 3-23

3.4.3 Searching for Drills

As your list of Drills gets larger and larger, it will become more challenging to find a particular Drill just by scrolling. The Power Pong Application provides a search feature. To search, perform the following.

1. From the Drills main screen, press the Drill Search icon. A new window will appear for you to enter a Search string of characters. (Figure 3-24)
2. In the Search field, you can enter any collection of characters that will become your search string. For example, type the word “smash” and then press the search button on your device. (Figure 3-25)



Figure 3-24

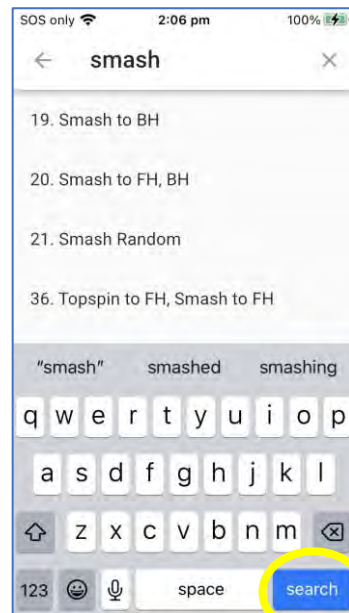


Figure 3-25



Figure 3-26

3. A list of Drills that have your search phrase as part of the Drill name **or as part of a Drill Tag** - which is covered Section 3.4.4 will be presented to you in a scrollable fashion. (Figure 3-26)
4. Select the Drill you're looking for, by touching it.

3.4.4 Adding Tags to a Drill

Drills can be defined (and Searched for) not only by the name of the Drill, but also by Tags which are simply descriptor words, that you can assign to a Drill to help describe it. To add a Tag to a Drill, perform the following steps.

1. Go to the Drills main screen.
2. Choose the Drill that you want to add a Tag to.
3. Touch the “...” menu in the top right corner. (See Figure 3-27)
4. Choose Tags. (See Figure 3-28)

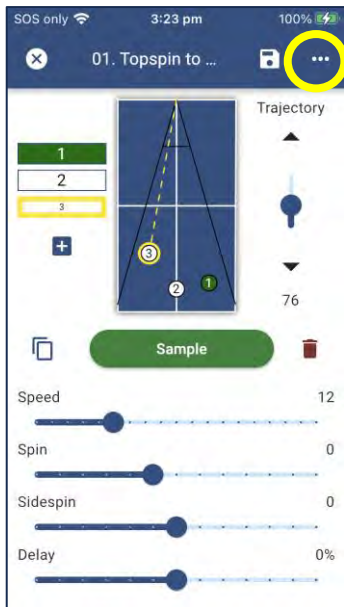


Figure 3-27

Menu



Figure 3-28

5. Type in the Tag word of your choice. You can add over 50 tag words as you like to describe a Drill. (Figure 3-29)
6. To Remove tags, touch the Remove Tag button. (Figure 3-29)

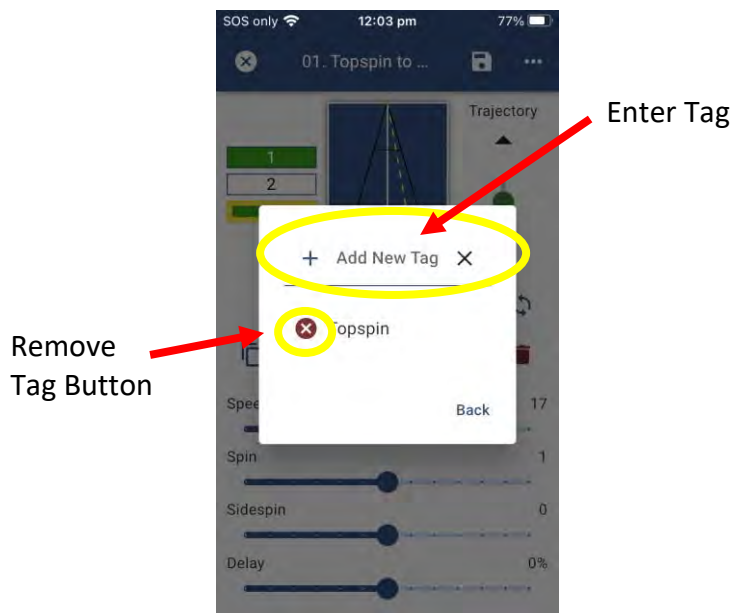


Figure 3-29

3.4.5 Starting / Stopping Drills

Note: When using Drills, YOU MUST WORK WITH SPIN, SPEED AND TRAJECTORY TO GET THE DESIRED RESULTS.

To start a Drill, we must choose the Drill from the Drill screen by touching the Drill Name or the drill table/diagram. This will take you to the Drill Edit screen – which is where you can edit the Drill and/or Start the Drill. Perform the following steps to start the Drill named 03. Topspin to FH/BH.

1. Enter the Drill screen by pressing the Drills button on the bottom left of the Application.
2. Scroll down until you see the Drill named 03. Topspin to FH/BH.
3. Touch either the name of the Drill or the ping pong table diagram for the Drill. This will take you to the Drill Edit screen (Figure 3-30).

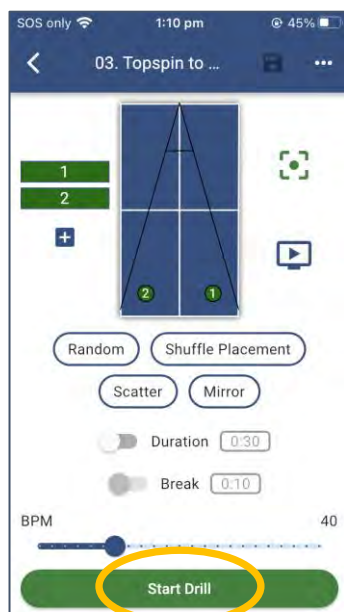


Figure 3-30

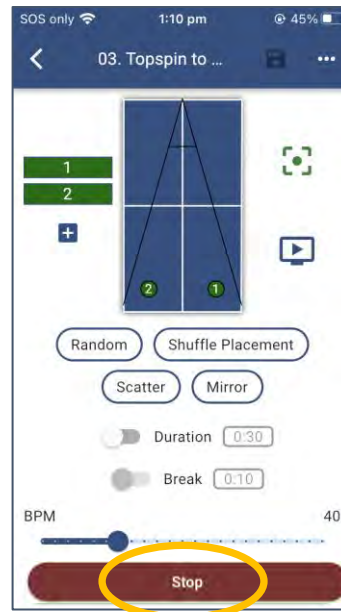


Figure 3-31

4. Push the Start Drill button on the bottom of the screen to start the Drill. Once the Drill has started, the Start Drill button will change to a Stop Drill button (Figure 3-31).
5. Press the Stop Drill button to stop the drill. Note that you can also use the remote FOB to stop the drill.

3.4.6 Creating a New Drill

One of the powerful features of the Omega robot, is the ability to create your own drills. Before programming the Omega robot, you may find it useful to design your Drill ahead of time, on paper or at least in your head. Think about the number of balls that you want in your Drill as well as the ball attributes including ball placement, ball speed, ball height, spin, etc., for each ball. When you are ready to enter the Drill, perform the following steps.

Perform the following steps to create a new Drill.

1. Go to the main Drill Screen. The main Drill screen displays “Drills” in the upper left corner.

2. Push the “+” icon (bottom right). A new Drill will be created. If this is the first new Drill you are creating, it will be assigned the name Drill 49. (Figure 3-32) This is because the Application comes with 45 preset Drills plus 3 Test Drills (45+3=48), so the app will simply use the next highest number, for the next Drill name.

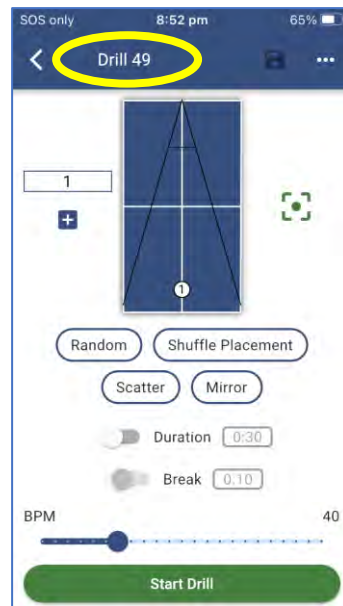


Figure 3-32

3. Press the “<” Back button to go back to the main Drill screen.
4. You will now see your new Drill listed at the top (or beginning) of the list of available Drills. We will cover editing an existing drill in the next section of this User Manual.

3.4.7 Cloning an Existing Drill

A second way to create a new Drill, is by Cloning **an existing Drill**. You would do this, for example if you had a Drill that you enjoy using, but wanted a copy of that Drill so you could make changes to it without modifying the original. In the following example, we will clone Drill 1.

Perform the following to Clone a Drill.

1. From the main Drill screen, scroll until you see the Drill named “01. Topspin to FH”. (Figure 3-33)
2. Touch the name or the table/diagram to select the Drill and open the Drill Edit screen.
3. In the upper right corner of the Drill Edit screen, you will find a menu that is accessed by touching the “...” button. Touch that button (Figure 3-34)
4. Touch/press that icon. A drop-down menu will be displayed with 5 choices, one of them being Clone. (Figure 3-35)
5. Press/touch the word Clone. On the bottom of the screen, you will see a message “Drill Cloned” along with an Open button. That message will fade after a few seconds.
6. Press the back arrow button to get back to the main Drills screen.
7. Scroll to the top of the list, and you will see a new Drill called “01. Topspin to FH 2”. This drill will be an exact clone of Drill named “01. Topspin to FH”.



Figure 3-33

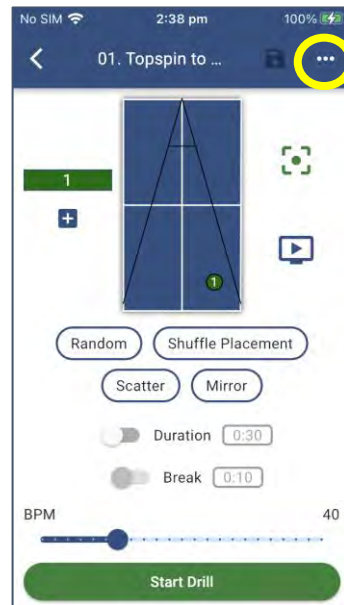


Figure 3-34

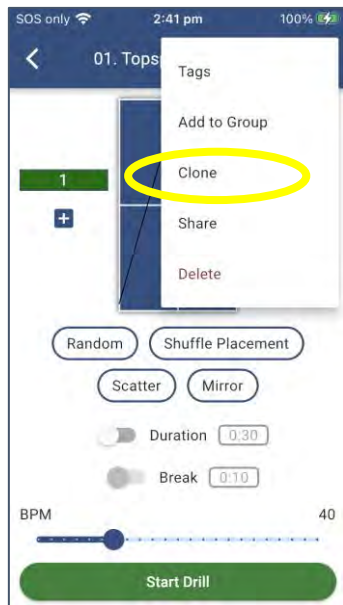


Figure 3-35

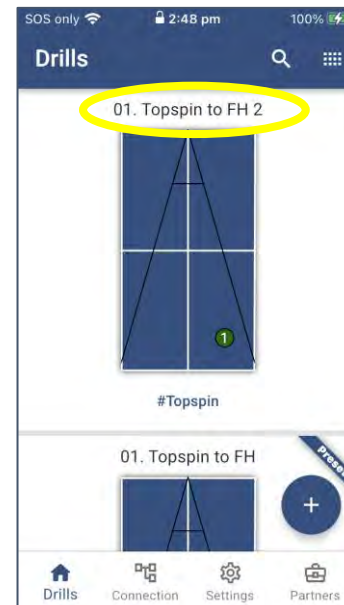


Figure 3-36

3.4.8 Changing the Name of a Drill

Drill names can be easily changed to better reflect the Drill content and/or design. Changing the name is usually required after adding Balls, changing Ball placement, etc. Perform the following to rename a Drill.

1. Choose a Drill from the main Drills screen (Example: Drill 49) that you'd like to change the name of. (Figure 3-37)
2. From the Drill Edit screen, touch the name of the Drill. (Figure 3-38) This will open a new window where you can enter a new Drill Name. (Figure 3-39)
3. Enter a new Drill Name (Example: My New Drill) and press the Confirm button. (Figure 3-39)

The Drill Edit screen will now display the new Drill Name! (Figure 3-40)

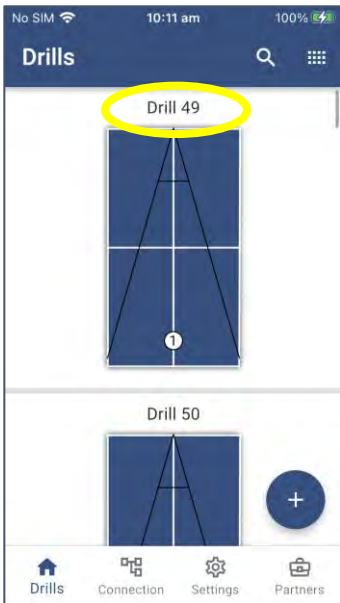


Figure 3-37

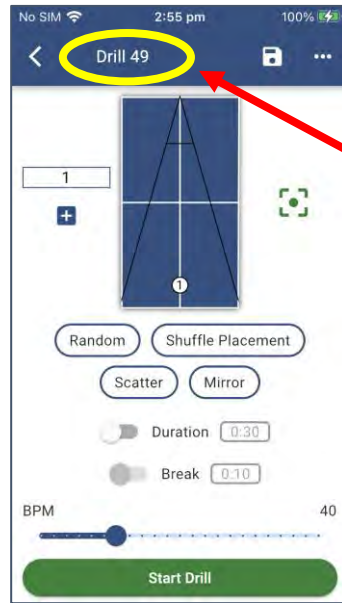


Figure 3-38

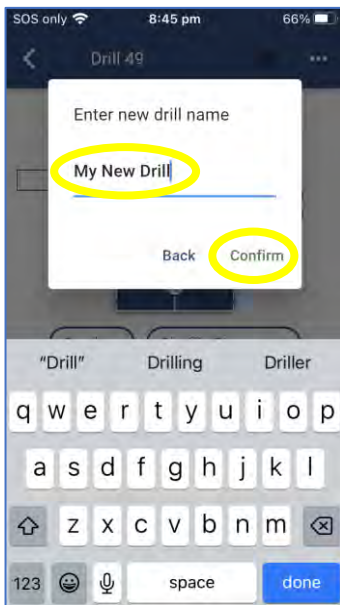


Figure 3-39

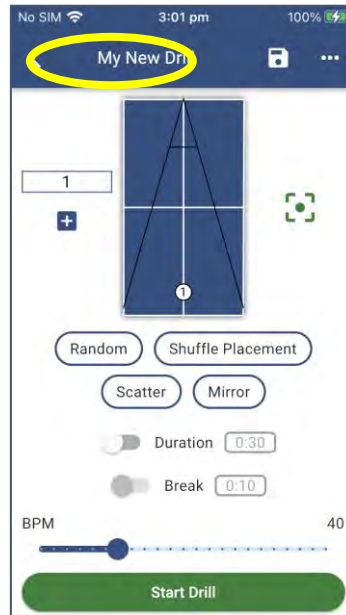


Figure 3-40

3.4.9 Adding Balls to a Drill

A Drill can have up to 8 Balls. To add a ball to a Drill, perform the following steps.

Note: Changing the parameters/attributes of the individual Balls in a Drill is covered in Section 3.5 in great detail.

1. From the main Drill screen, select the Drill called "01. Topspin to FH 2". by touching/pressing the drill name or table icon below the name. (Figure 3-41)

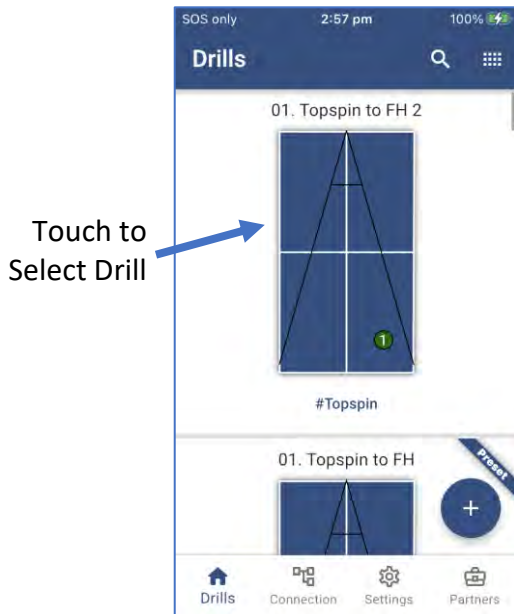


Figure 3-41

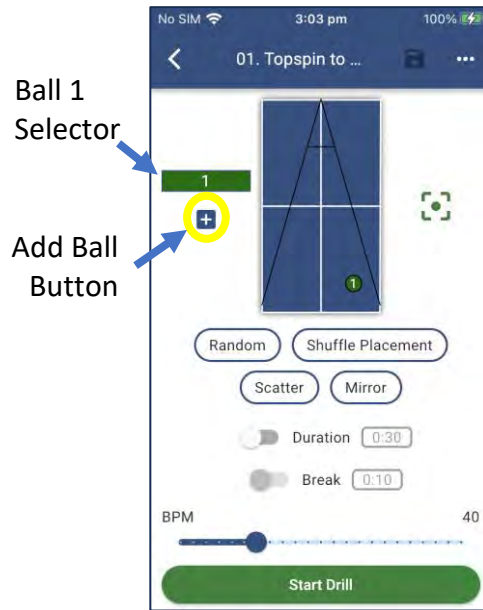


Figure 3-42

On the left side of the screen, there is a rectangular box with the number “1” in it. That box is called the Ball 1 Selector, and represents the first ball in the drill. If the Drill includes 7 balls, there would be 7 rectangular boxes.

2. Press the Add Ball button “+” (Figure 3-42) below the Ball 1 Selector, to add an additional ball to this Drill. You will now see two balls in the Drill. (Figure 3-43) and you will be in Drill Edit mode.

Note: When balls are added to a drill, they will have default parameters (Speed=12, Spin=0, Sidespin=0, Delay=0%), and the placement will be **near the end of the table, along the center line.**

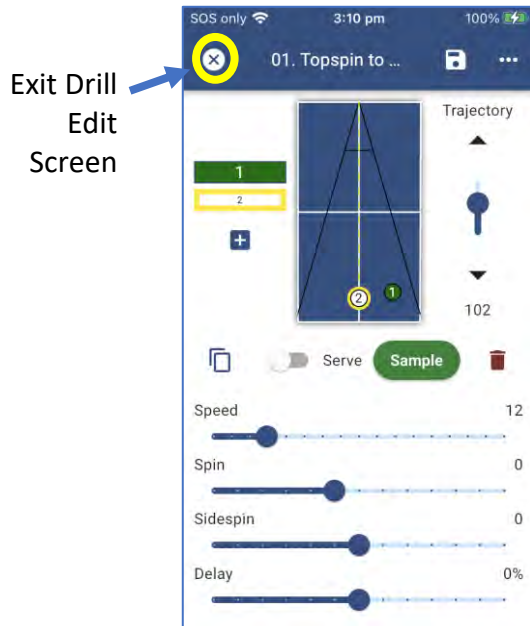


Figure 3-43

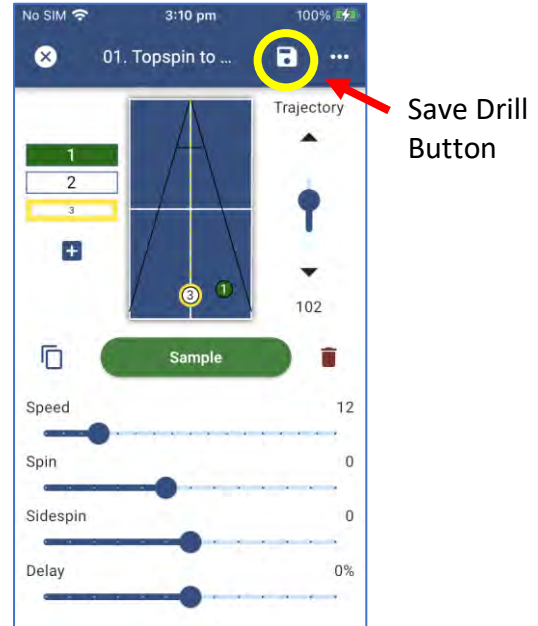


Figure 3-44

3. Press the + icon again, to add a third ball. Your screen should now show that the drill has 3 balls. (Figure 3-44). Ball 3 has now been added and is positioned right on top of Ball 2.

You will note that the Drill Save button is enabled, anytime you edit a Drill. (Figure 3-44) If you wish to Save the changes that you have made – in this case adding to Balls to the Drill, Press the Save button.

Note: Editing Ball Parameters, removing Balls and more is covered in Section 3.5 of this manual.

4. Press the Exit Drill Editing icon to return to the main Drills screen (Figure 3-41).

3.4.10 Deleting a Drill (Figure 3-31)

To delete a Drill, perform the following steps.

1. From the Drills main screen, select the Drill that you want to Delete by pressing/touching it.
2. From the Drill edit screen, press the drop-down Menu button “...” from the top-right corner. (Figure 3-45)
3. Choose “Delete”. (Figure 3-46)
4. Confirm that you want to Delete the Drill by pressing/touching “Delete”. (Figure 3-47)

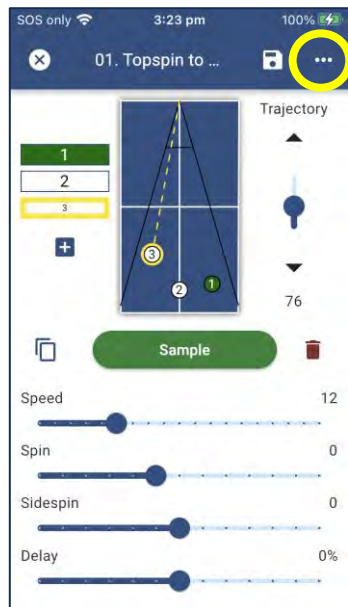


Figure 3-45

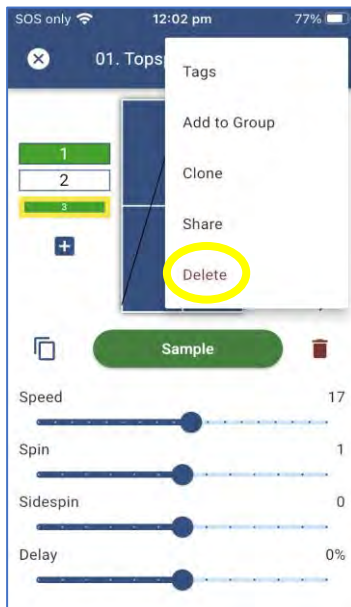


Figure 3-46

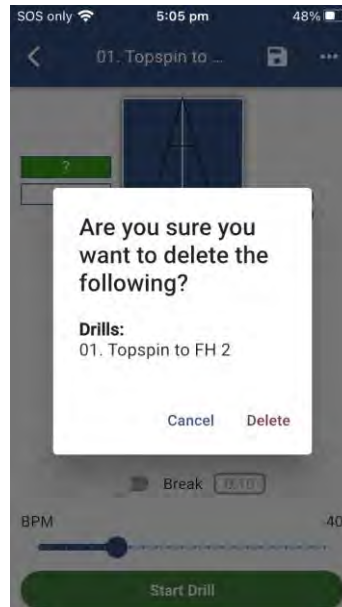


Figure 3-47

3.4.11 Drill Duration and Break

Drill Duration and Drill Break are options that you may utilize while using Drills. The Drill Duration value refers to the length of time that a drill will run, while the Drill Break value refers to the amount of time that the robot will pause between iterations of the drill.

Note: Drill Break is not available unless you have turned ON Drill Duration.

To use Drill Break / Duration, perform the following steps.

1. Choose a Drill from the Drill Main Screen.

- From the Drill Edit screen, press the Duration Toggle Switch to move it to the ON position. (Figure 3-48)
- Touch the Duration time box to adjust the length of time you would like the Drill to run. (Figure 3-49)

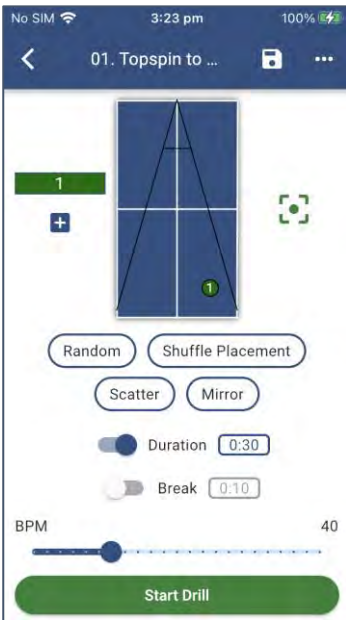


Figure 3-48

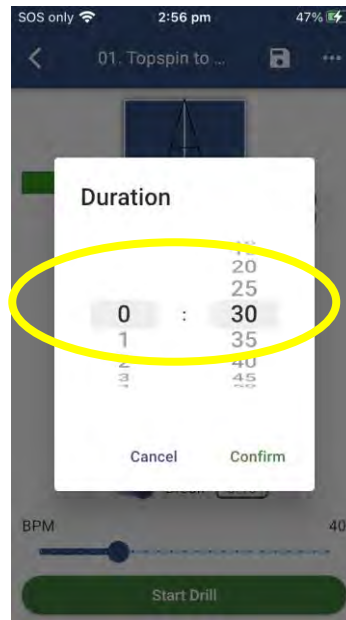


Figure 3-49

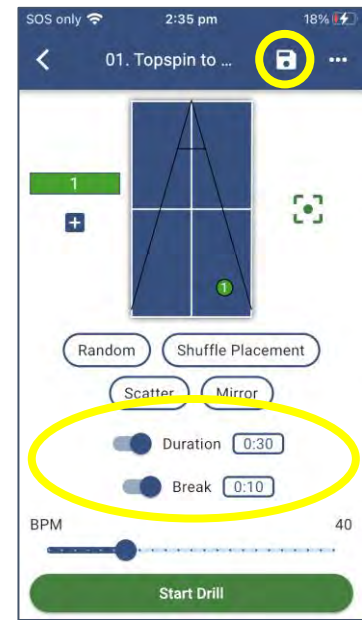


Figure 3-50

- Press the Break Toggle Switch to move it to the ON position. (Figure 3-50)
- Touch the Break time box to adjust the length of time you would like between each iteration of the Drill.
- Press Start Drill to use the Drill with the Duration/Break parameters you've chosen.
- Save the Drill as desired by pressing the Save button. (Figure 3-50)

To disable the Drill Duration/Break feature, simply toggle the Switch(es) to the OFF position.

3.4.12 Random Modes

There are three Random Modes that you can utilize with Drills. They are listed below.

- Random** - Plays the balls of a Drill, in a random order. When Random is selected, the Ball Selector numbers turn into question marks. (Figure 3-51)
- Shuffle Placement** - The robot will treat the Ball settings (Speed, Spin, Sidespin, etc.) separately from the Ball Placement settings. When the Drill is started the Ball settings for Ball 1 will be used along with a randomly selected placement (from Balls in the Drill). Next, the Ball settings for Ball 2 will be used, with another randomly selected placement, and on and on. This feature creates many different variations within an 8-ball Drill. Random Sequence mode requires at least two Balls to be active and/or in a Drill. (Figure 3-52)
- Scatter** - Adds more variability to the trajectory and placement. This mode is similar to the less precise shots that a human might deliver. The ball will be delivered within a 20cm diameter around the placement chosen on the screen – which is displayed on screen. (Figure 3-53)

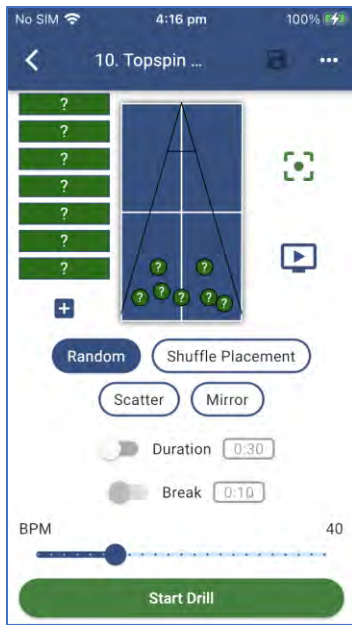


Figure 3-51

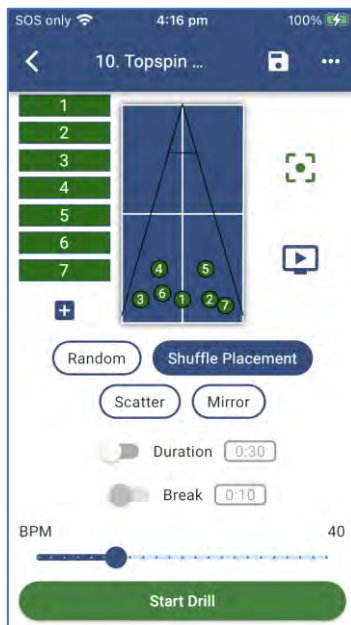


Figure 3-52

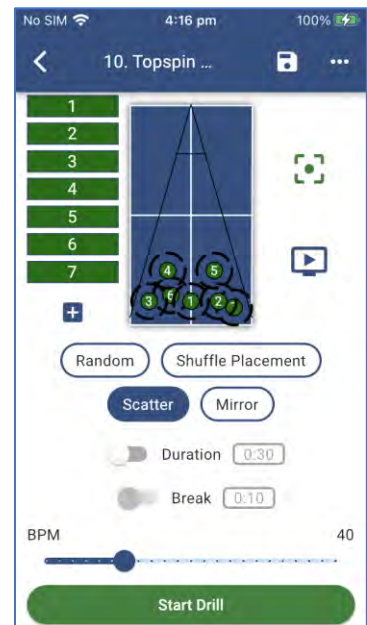


Figure 3-53

Note: When using the Scatter mode, it is best not to choose ball placements that are close to the side of the table, end line of the table, or near the table net. Doing so will result in some balls to be placed over the side, over the end of the table or into the net because of the increased area/randomness of the placement for the balls.

3.4.13 Drill Balls Per Minute (BPM)

The BPM slider increases or decreases the rate, or frequency of thrown balls. This control affects all balls thrown for the current Drill and this value is Saved as part of the Drill, when a Drill is Saved. A range of 10 to 120 balls per minute is possible. The set BPM is shown above the right side of the BPM slider. (Figure 3-54)

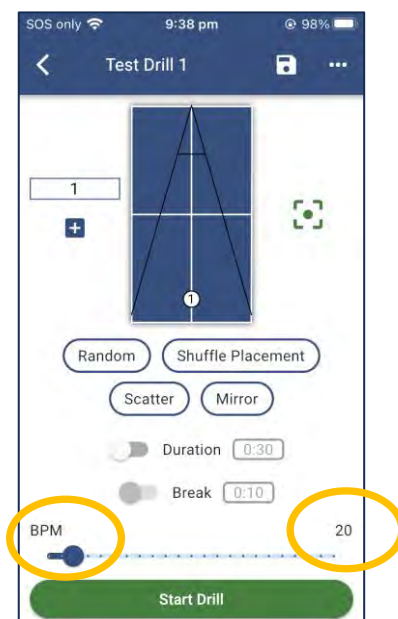


Figure 3-54

3.4.14 Changing Ball Order in a Drill

With any of the Drills in the Omega Application, you can change the order of Balls. This is done from the Drill Edit screen as follows.

1. From the main Drills screen choose the Drill you wish to work with. **For this example, let's use Drill 05. 2 Topspins to BH, 1 Topspin to FH.** (Figure 3-55 and 3-56) Note that Ball 2 is hidden under Ball 1.



Figure 3-55

Ball
Selectors

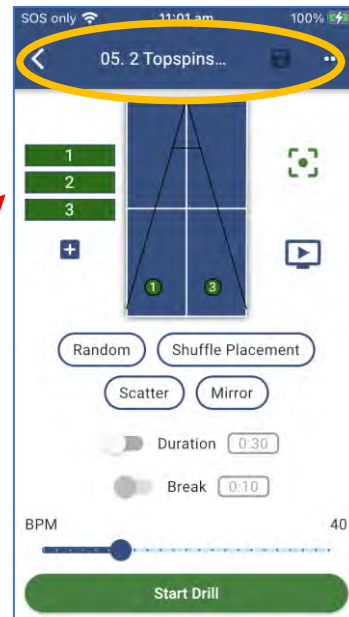


Figure 3-56

2. First, let's set the Placement for Ball 1 a little closer to the net. Do this by dragging Ball 1 so that it looks like Figure 3-57.

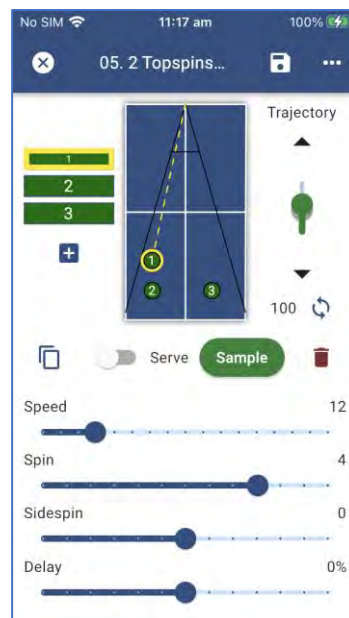


Figure 3-57

3. Now, let's change the order of Ball 1 and Ball 2 by dragging the **Ball Selector** for Ball 2 to the top of the list of Ball Selectors. Your screen should now look like what's shown in Figure 3-58, and you have successfully changed the order of Balls in a Drill.

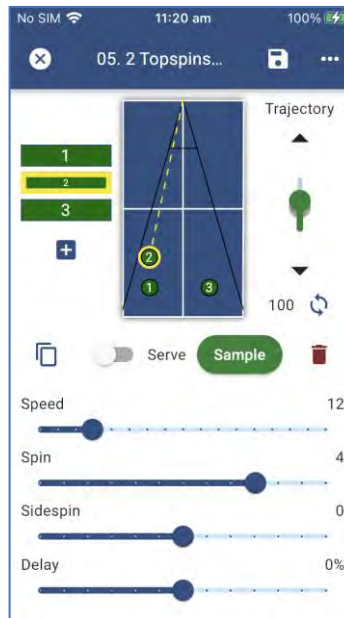


Figure 3-58

3.4.15 Sharing Drills with Power Pong Omega Users

To Share a Drill with another Power Pong Omega Application user, perform the following.

1. Select/Choose the Drill that you would like to share from the main Drill screen.
2. Touch the “...” menu in the upper right corner of the Drill Edit screen. (Figure 3-59)
3. From the menu provided, choose Share. (Figure 3-60)
4. Your Android or iOS device will prompt you to choose a mechanism/method that your device provides (email, text, etc.) to share it! Choose that method.
5. Enter the appropriate credentials of the user that you plan to share with, and Share!

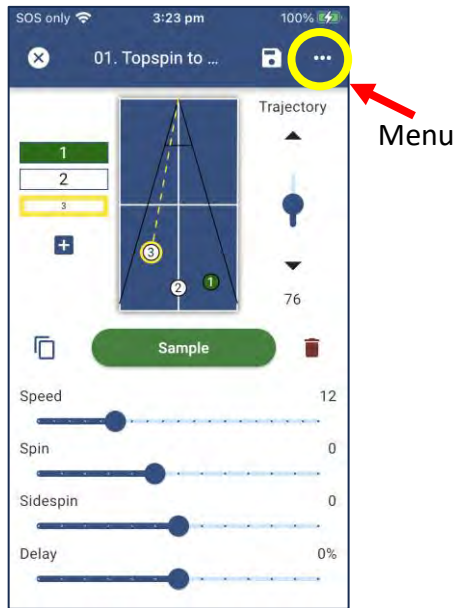


Figure 3-59

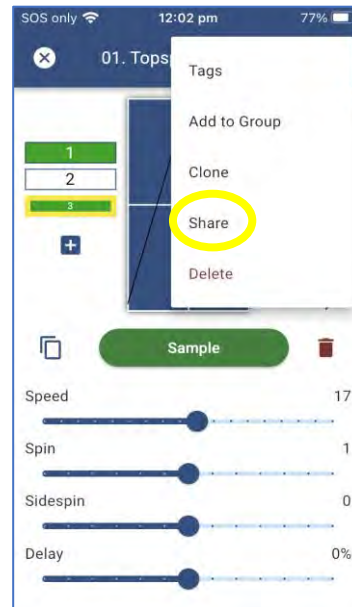


Figure 3-60

3.5 Editing Ball Attributes in Drills

3.5.1 Ball Placement

To change the placement of a Ball, we can simply “drag” the Ball to a different location on the table. Perform the following steps to change (as an example), the placement of a Ball in Drill 13.

1. From the Main Drills screen, scroll as necessary, and choose the Drill named “13. Backspin to BH, Mid, FH”, by touching the Ping Pong table under the Drill name. (Figure 3-61)
2. Select Ball 1 by touching the Ball One selector. (Figure 3-62)
3. Using a finger, touch Ball 1 and drag it to a position closer to the center of the table. (Figure 3-63)

That’s all that’s required to change Ball placement. As you add Balls to a Drill, you can position them anywhere you’d like, on the table.

Note: Significant placement changes may result in the Speed and Trajectory values changing automatically as the robot attempts to utilize the best settings for the placement you have chosen.



Figure 3-61

Ball
One
Selector

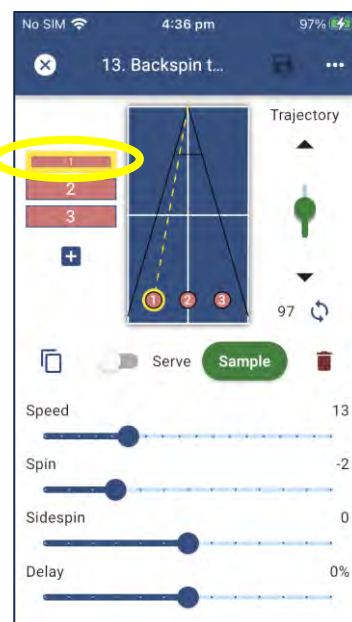


Figure 3-62

New Placement
of Ball

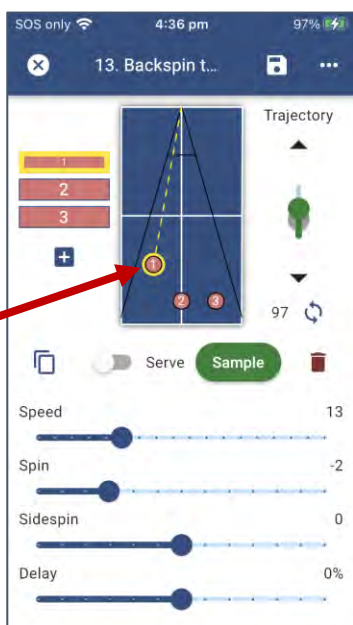


Figure 3-63

3.5.2 Ball Trajectory

The Trajectory setting raises or lowers the Ball (throw angle). There are two ways to change the trajectory of a Ball. The first is to press either the Trajectory Up Arrow or Trajectory Down Arrow. The second is to drag the Trajectory slider either up or down. Small adjustments to Trajectory are accomplished most easily using the up/down arrows. (Figure 3-64)

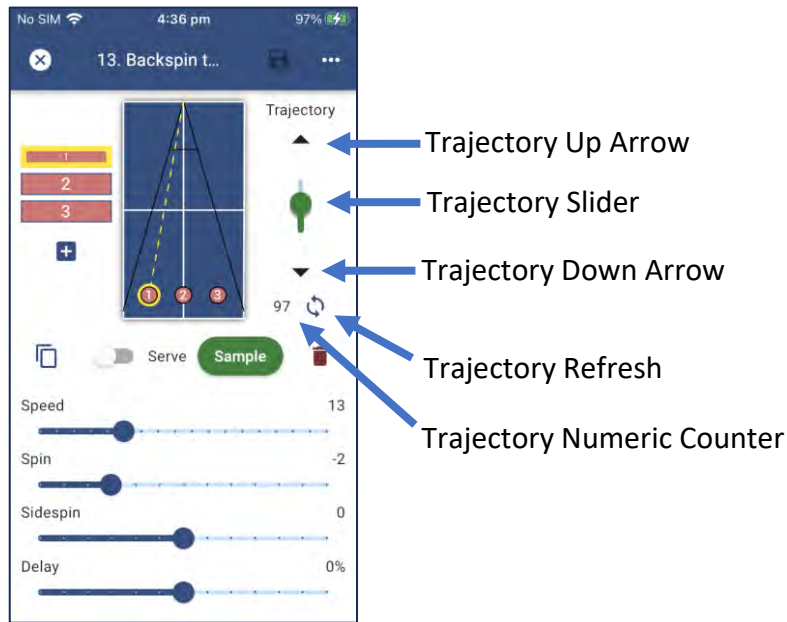


Figure 3-64

When you change the placement of a Ball, the trajectory MAY automatically adjust to an estimated value, in order to direct the ball as close as possible to the desired area. **This value is “estimated”, so you may need to manually fine tune the trajectory, after Ball Placement changes.**

If you move the slider away from the estimated value, it turns green and leaves a "shadow" behind to show where it was estimated to be. The Trajectory Refresh icon will reset the trajectory back to the original value when clicked.

3.5.3 Speed (Figure 3-64)

The Speed slider, when adjusted, will increase, or decrease the speed of the ball. Adjustments made to Ball speed may require adjustments made to the trajectory in order to achieve the desired placement.

3.5.4 Spin (Figure 3-64)

The Spin slider will increase or decrease the amount of spin on the Ball – either Top-spin or Back-spin. A setting of 0 indicates no spin. Settings to the right of 0 (1 to 7) indicate stronger and stronger amounts of Top-spin. Settings to the left of 0 (-1 to -5) indicate stronger and stronger amounts of Back-spin.

3.5.5 Sidespin (Figure 3-64)

The Sidespin slider will increase or decrease the amount of sidespin on the Ball – either left or right spin. A setting of 0 indicates no Sidespin will be on the Ball. Settings to the right of 0 indicate stronger and stronger right spin. Settings to the left of 0 indicate stronger and stronger left spin.

3.5.6 Delay (Figure 3-64)

The Delay feature is used to increase/decrease the time interval between balls being delivered. The Delay setting allows you to increase or decrease this time (on a ball-by-ball basis). If you feel that the timing between two balls is too short, you can use the left button to set a negative value, which in effect, reduces the set Ball/min setting (for this ball). This results in a longer delay before the next ball.

If you feel that the timing between two balls is too long, you can use the right button to set a positive value, which in effect, increases the Ball/min setting (for this ball). This results in a shorter delay before the next ball. This can be used as an example, in a drill where you may have a fast serve perhaps followed by a slow lob. When the Delay value is set to 0, there is no change to the delay for the selected Ball.

3.5.7 Designating Balls as a Serve

Ball 1 AND Ball 2 of a Drill have additional functionality and can be designated as a Serve. The Omega robot will automatically “insert” a 2-3 second pause before a Serve ball is delivered, to simulate playing a game with an opponent.

To make Ball 1 a Serve ball, perform the following. (Figure 3-65)

1. Select/Edit the desired Drill.
2. Select Ball 1 of the Drill by touching the Ball 1 Selector.
3. Press the Serve toggle/slider switch so that it is in the ON position. (Figure 3-66)
4. Save the Drill by pressing the Save Drill button.

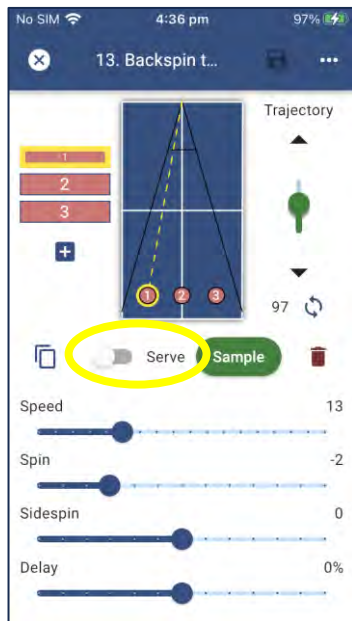


Figure 3-65

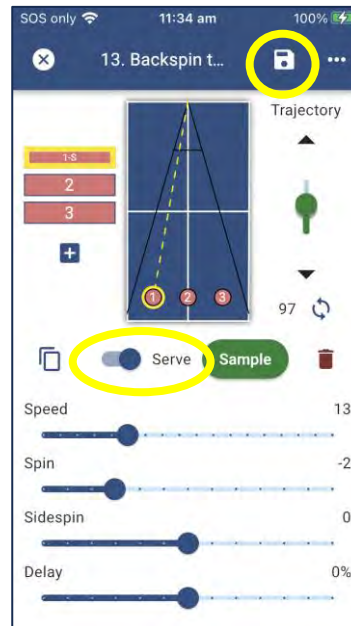


Figure 3-66

If you would also like Ball 2 to be a Serve, Select Ball 2 and press the Serve toggle/slider so that it is in the ON position.

Note: Ball 2 CANNOT be a Serve Ball if Ball 1 is not a Serve Ball.

Note: When saving the Drill, the SERVE designation ON/OFF is saved for Ball 1 and Ball 2.

To turn the SERVE designation OFF, perform the following.

1. From the Drills main screen, select the desired Drill.

2. Select the Ball in the Drill that you wish to remove Serve from.
3. Press the Serve toggle/slider switch so that it is in the OFF position.

3.5.8 Sample Button (Figure 3-67)

Pressing the sample button will cause the selected ball to be delivered once. The Sample button is useful when you are modifying a Drill, perhaps adding a Ball. You can set the Placement and appropriate parameters for the Ball, and then press the Sample button. If you don't like where the ball landed, you can change the settings for the Ball, and hit the Sample button again. This allows you to tailor each ball to your liking, before running the Drill itself.

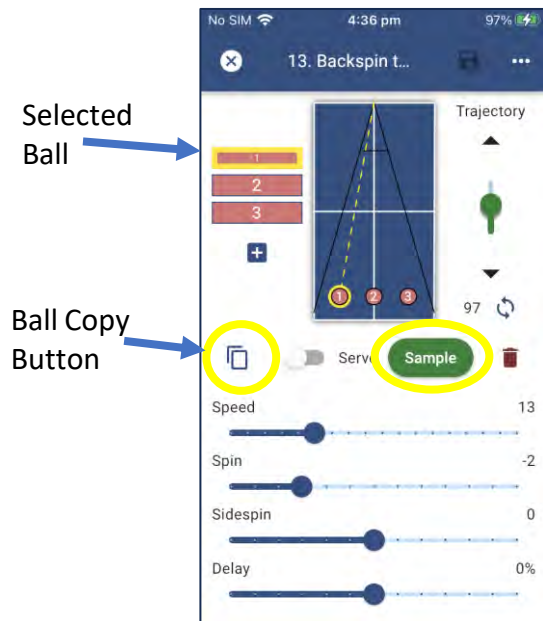


Figure 3-67

3.5.9 Copying a Ball

If you have a Ball set up with desired parameters, to save time, you can copy the Ball and move it to another Placement. To copy a Ball, perform the following steps.

1. Select/Edit the Drill of your choice.
2. Choose the Ball that you'd like to duplicate by touching the corresponding Ball Selector. (Figure 3-58)
3. Press the Ball Copy button. (Figure 3-67) A new ball will be added to your Drill with the same parameters as the previously selected Ball.
4. Position the ball as desired.
5. Save the Drill by pressing the Save Drill button.

3.5.10 Removing a ball from a Drill

To remove a ball from a Drill, perform the following steps.

1. Select/Edit the Drill.

2. Select the Ball in the Drill that you wish to remove, by touching the appropriate Ball Selector. (Figure 3-68)
3. Press the Remove Ball Button Icon (Figure 3-68).
4. Save the Drill by pressing the Save Drill button.

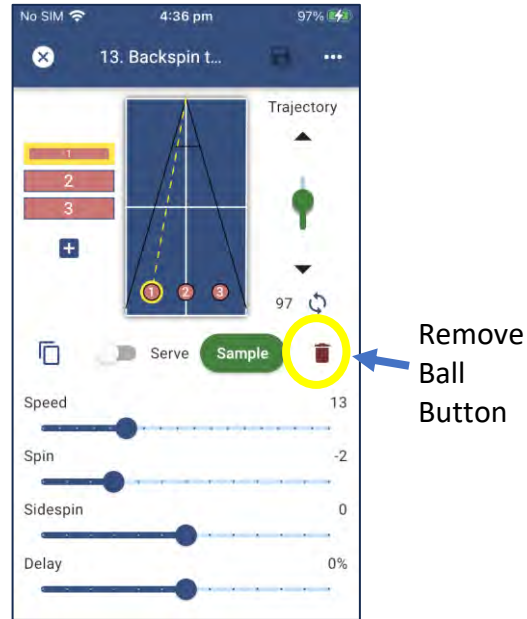


Figure 3-68

3.6 Omega Application Groups

The Power Pong Omega provides an advanced feature called Groups. A Group is a sequence of Drills saved in the Omega application, as one continuous playable exercise. The Omega robot will save up to 10 Groups with up to 32 Drills per Group. This is another extremely powerful feature that clearly sets the Power Pong Omega apart from its competition.

The Applications comes with 2 pre-loaded Groups, one is called **Preset Drills**, and the other is called **Test Drills**. (Figure 3-69)

When a Group is played, one repetition of each Drill stored in the Group is played, and this process repeats in a loop. For example, if Drills 1, 2, and 3 are saved into a Group, one repetition of Drill 1 is played, followed by one repetition of Drill 2, and finally one repetition of Drill 3. The repetition continues looping until the robot is stopped.

Note: Any changes that are made to any Drills that are part of a Group, will be observed when playing the Group or the individual Drill.

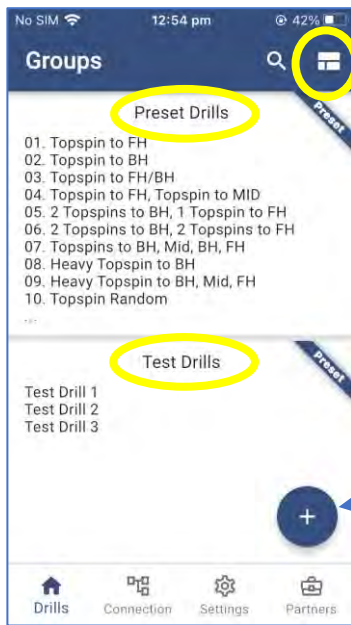


Figure 3-69

Drill/Group
Toggle
Button

Add Group
Button

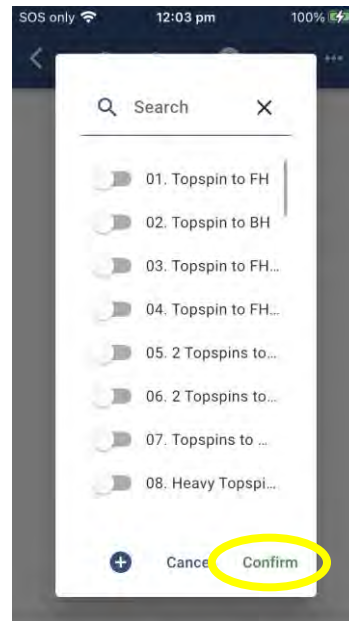


Figure 3-70

3.6.1 Creating a New Group

Create a new Group as follows:

1. From the main Drills screen, push the Drill/Group toggle button at the top right corner of the display to switch to the main Groups screen. (Figure 3-69)
2. On the main Groups screen, push the "+", New Group button. You will be presented with a blank slate on which you will build your group.
3. Push the "+", add Drill button at the top of the screen. You will now see a scrollable list of all available Drills. (Figure 3-70)
4. Choose the Drills that you would like to have in this Group by Pressing the slider switch to enable the Drill.
5. When you've added all of the Drills you intend to have in the Group, push the Confirm button near the bottom of the Add Drill screen. (Figure 3-70)
6. You now have created a Group and can Save it by pressing the Save button at the top of the Group screen.

3.6.2 Adding/Removing Drills to/from Groups

1. Push the Drill/Group toggle button from the Drills main screen to get to the Group screen. (Figure 3-69)
2. Choose the Group that you would like to modify.
3. To add a Drill to the Group, push the "+" Add Drill button on the top of the screen. You will now see a scrollable list of all available Drills. (Figure 3-71)

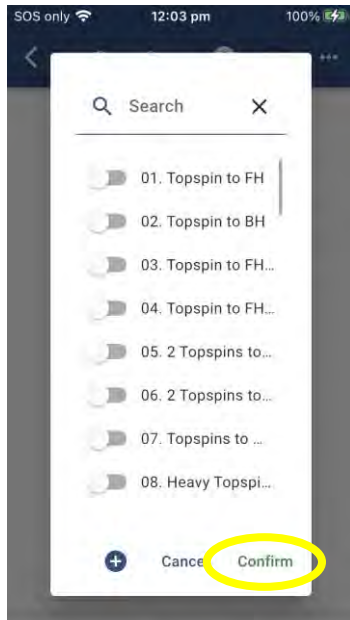


Figure 3-71

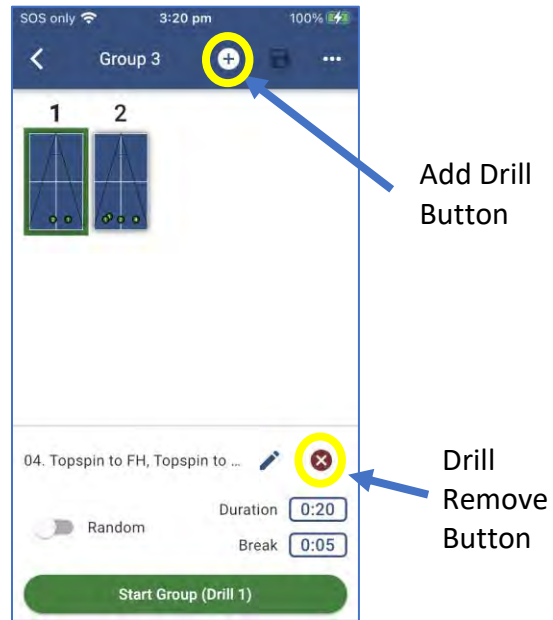


Figure 3-72

4. Press the slider switch for the Drills you wish to have in this Group.
5. Press the confirm button on the bottom of the screen.
6. To remove any Drills from the group, select the Drill and press the Drill remove button. (Figure 3-71)
7. Save the Group by pressing the Save button.

3.6.3 Renaming Groups

1. Touch/press the current Name at the top of the Group Edit screen.
2. Enter a name for your new Group and press Confirm.
3. Push the Save button at the top.

3.6.4 Removing a Group

1. From the Drills main screen, enter Group mode by pressing the Drill/Group toggle button.
2. Select the Group that you want to Remove.
3. Press the “...” menu on the top right corner of the screen.
4. Choose Delete.
5. Press Delete on the pop-up window to confirm.

3.6.5 Playing Groups

1. From the Group screen, select the Group that you want to play by pressing/touching it.
2. Press that Start Group button near the bottom of the screen.

3.6.6 Searching for Groups

1. From the Groups main screen, select the Search button near the top of the screen.

2. Enter your search criteria, as an example – the word Smash.
3. A list of Groups that have a name with the word smash, or contain a Drill with a name incorporating the word “smash” or a corresponding tag, will appear.
4. Choose the Group that you wish to play.

3.6.7 Using Random Features with Groups

Random settings that are used in Groups will be available when the Drills become part of a Group as well. If you turn on the Random feature while using Groups, the robot will throw the first ball in a Drill that is part of a Group (which you may configure as a Serve), and the remainder of the balls will be delivered randomly.

Note: As covered in Section 3, designating a ball as a Serve ball, will cause a 1-2 second delay before the ball is thrown, very similar to match play. This function will be utilized in Groups in the same way.

3.6.8 Editing Drills From Within a Group

While playing a Group, if you wish to modify one of Drills that is part of the Group, you can do this without leaving the Group. Perform the following steps:

1. From within the current Group, stop play using the Stop Group button on the Application. (Figure 3-70)
2. Select the Drill that you’d like to edit by clicking on the Drill icon on the Group edit screen. The name of the Drill will be displayed on the lower half of the Group Edit screen.
3. Press the Edit button to the right of the Drill name.

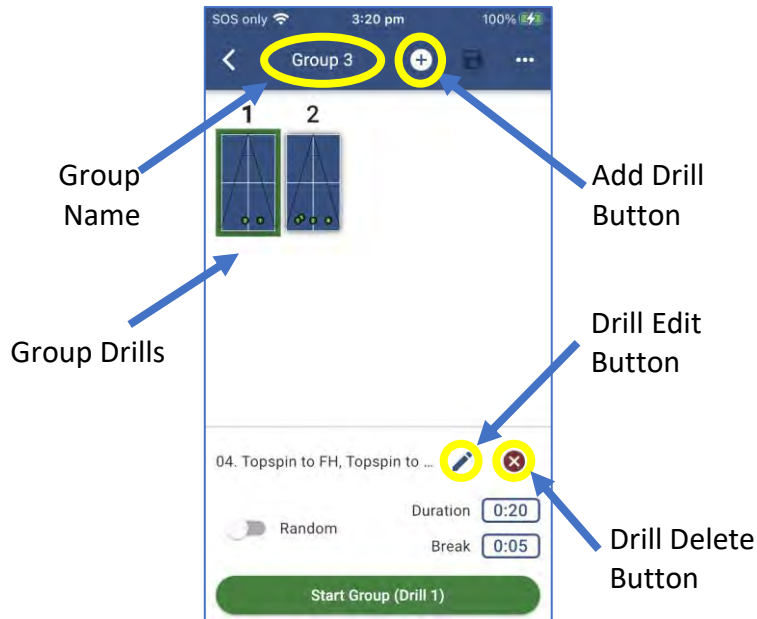


Figure 3-73

4. Make your desired changes to the Drill.
5. Press the Save button at the top of the Drill edit screen and confirm the Save.
6. Press the Back button at the top of the Drill edit screen.

There is no need to Save the Group because we’ve only modified a Drill, not the Group itself.

3.6.9 Removing Drills from Within a Group

While playing a Group, if you wish to modify one of Drills, you can do this without leaving the Group. Perform the following steps:

1. From within the current Group, stop play using the Stop Group button on the Application.
2. Select the Drill that you'd like to edit by clicking on the Drill icon on the Group edit screen. The name of the Drill will be displayed on the lower half of the Group Edit screen.
3. Press the Drill Delete button to the far right of the Drill name.
4. Make your desired changes to the Drill.
5. Press the Save button at the top of the Group screen and Confirm the Save.

3.6.10 Using Duration and Break in Groups

Groups have the Duration and Break features, just like Drills. Each Drill in a Group however contains a unique/separate Duration and Break time values that will be Saved as part of the Group – but those unique/separate values will NOT be passed on and Saved to the Drill itself. When the Group is played, as a result, the Duration and Break values specified on the group page (for each Drill) are used, rather than the Duration and Break values specified and Saved in each Drill.

The Group Duration and Break values are shown in the bottom right of the Group screen. The Duration value will define the length of time the Drill will play, and the Break value will define that amount of time that the Robot pauses before moving on to the next Drill.

When playing Drills through a Group, if the Drill being played takes 60 seconds to complete, but the Group Duration for that Drill is set to 20 seconds, the Robot will only run the first 20 seconds of the Drill, pause for the Group Break time (for that Drill), and then move on to the next Drill. If the next Drill takes 40 seconds to complete, but the Group Duration for that Drill is 10 seconds, the Drill will run for 10 seconds, pause for the Group break time (for that Drill), and then move on to the next Drill. This process is repeated for all Drills in the Group.

3.6.11 Cloning Groups

Just like Drills, you can Clone an entire Group. Perform the following to Clone a Group:

1. Open the Group Edit screen for the Group that you would like to Clone.
2. Press/Touch the “...” menu on the top-right corner of the Group Edit screen.
3. Choose “Clone” from the Menu.
4. Press/Touch the Back Button. In the list of Groups, you will now see a new Group that is a clone of the original.

3.6.12 Sharing Groups with Other Power Pong Users

Just like Drills, you can share an entire Group with other Power Pong Omega users as follows:

1. Open the Group Edit screen for the Group that you would like to Share.
2. Press/Touch the “...” menu on the top-right corner of the Group Edit screen.
3. Choose “Share” from the Menu. Your Android or iOS device will prompt you to choose a mechanism/method that your device provides (email, text, etc.) to share it! Choose that method.
4. Enter the appropriate credentials of the user that you plan to share with, and Share!

3.7 Using the Remote Control FOB

The Omega robot comes with a small wireless Remote-Control FOB (Photo 3-5) which has a range of 4-5 meters (13-16 feet) giving you the ability to start and stop the robot throwing balls without having to press the Start - Stop button on the Application.

The (+) and (-) keys can be used to increase/decrease the Ball/min setting.

You may wish to keep the remote in your pocket to ease the start/stop of balls during Drills.

Note: Drills and Groups when used with the Omega application can only be started on the Android/iOS device. They can be stopped however using the FOB.



Photo 3-5

Section 4 - Maintenance and Troubleshooting

[TOC](#)

4.1 Pairing a New Remote FOB

If you must replace your Remote-Control FOB, it will have to be paired with the Omega robot before it will function. To pair the new Remote-Control FOB with the Omega robot, perform the following procedure.

1. Navigate to the Connections screen.
2. Press the down arrow key for the Connected Robot.
3. Press the Pair Remote button to begin the pairing process.

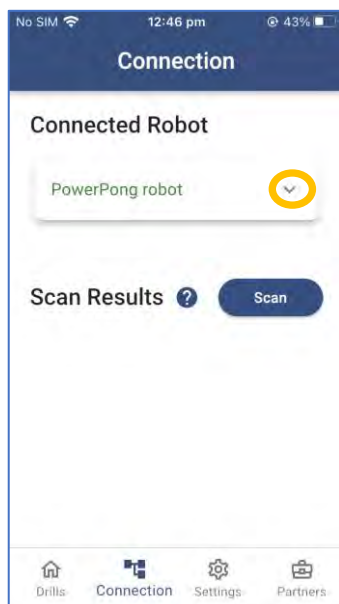


Figure 4-1

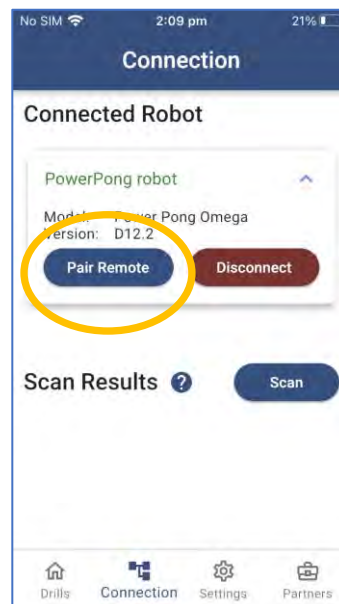


Figure 4-2

4.2 General Troubleshooting

PROBLEMS	POSSIBLE SOLUTIONS
Ball Throwing Head or Support Legs point towards back of robot.	Loosen the Throwing Height Adjustment Knob on the rear of the Ball Feed Tube Locking Assembly, then rotate head 180° so head points away from net. Grasp Support Legs and rotate them away from net (See Section 2 of Omega User Manual).
Application starts but no balls are thrown.	Press the Start Drill button to start ball delivery.
Balls thrown to wrong location.	<p>Are there rubber bands around the Deflector? If yes, remove the bands so Deflector Plate can move freely. Those parts are used only during transport.</p> <p>Verify deflector plates are clean and there is no build-up (side or top). See Omega User Manual, Section 5.</p> <p><u>Verify that all connecting cables are plugged in securely/completely.</u></p> <ul style="list-style-type: none"> • Disconnect AC power source. • Disconnect the Throwing head cable. Verify sure that 15 pins are present and that no pins are bent/damaged. Reconnect and securely by tightening thumbscrews. • Reconnect AC power.
Balls thrown at irregular depths.	<p>Check throwing wheel clearance. (Omega User Manual, Section)</p> <ul style="list-style-type: none"> • If throwing wheels are worn, replace all 3 wheels. (Omega User Manual, Section 5) • Clean White Strip on Deflector Plate with isopropyl alcohol. Replace if worn. (Omega User Manual, Section 5)
Double throws or missed throws.	Head height improperly adjusted. Must be locked in place with ring just above lock point. (Omega User Manual, Section 2)
Random functions on the Application does not activate.	Random modes other than Scatter require 2 or more Balls in the Drill.
Balls get stuck between the ball throw discs. Yellow lights may be flashing on the Application.	Turn off power and remove the ball(s). If balls continuously become stuck, there may be a bad Ball Throw Motor.

Balls are thrown with slight left/right spin, with controller set to no spin.	Perform Calibration procedure.
---	--------------------------------

Note: If you are not able to solve a problem with the help of this Troubleshooting guide, please contact Power Pong support for additional assistance. Refer to Section 1-3.